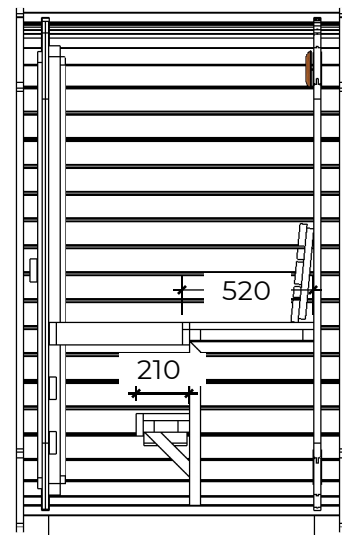
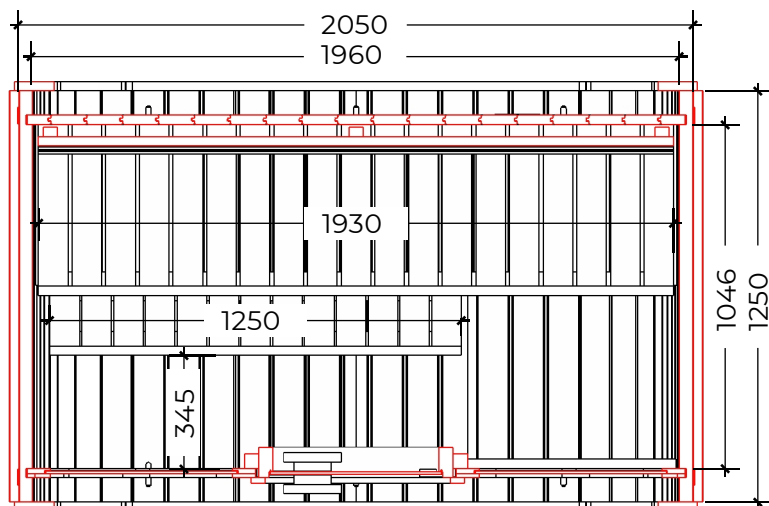
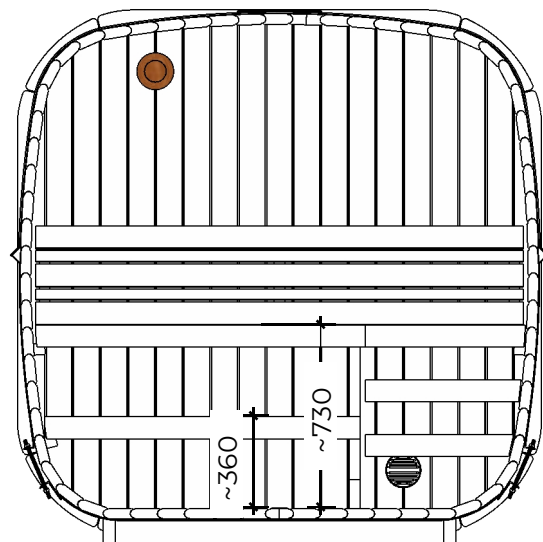
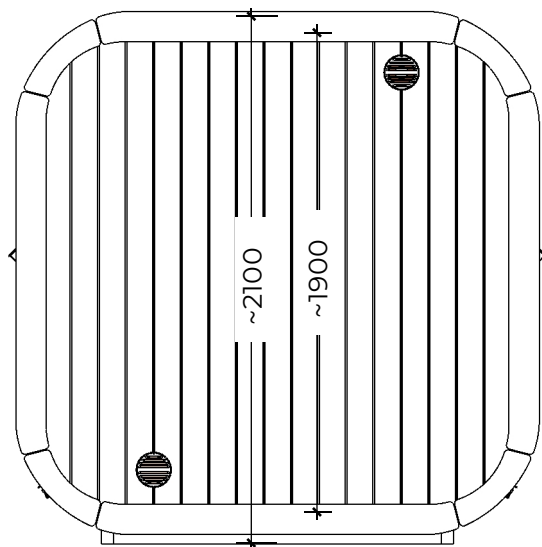
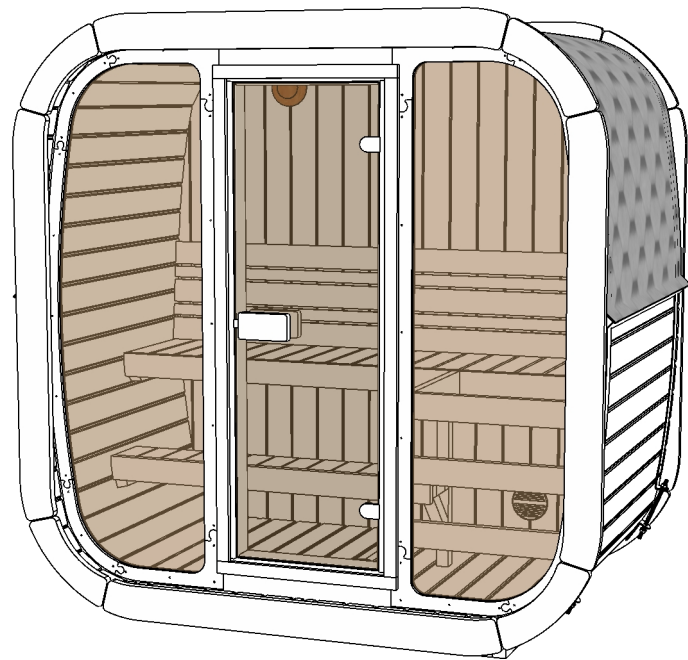
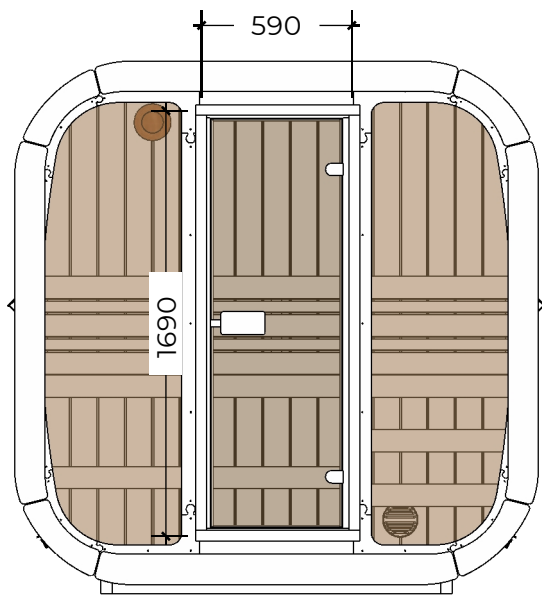
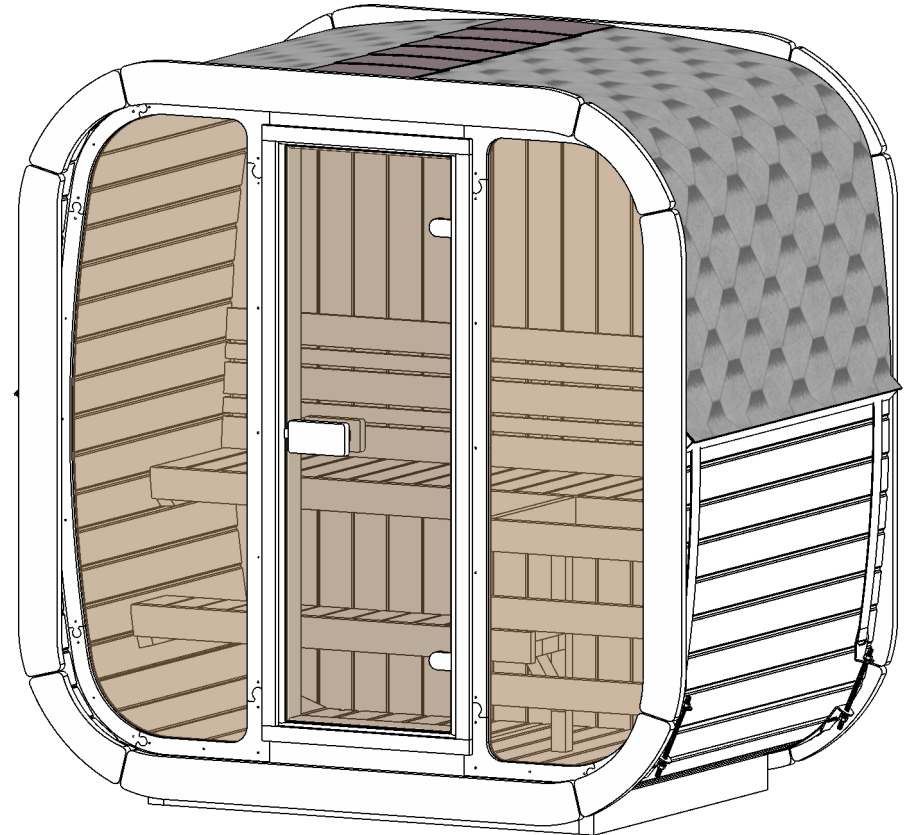
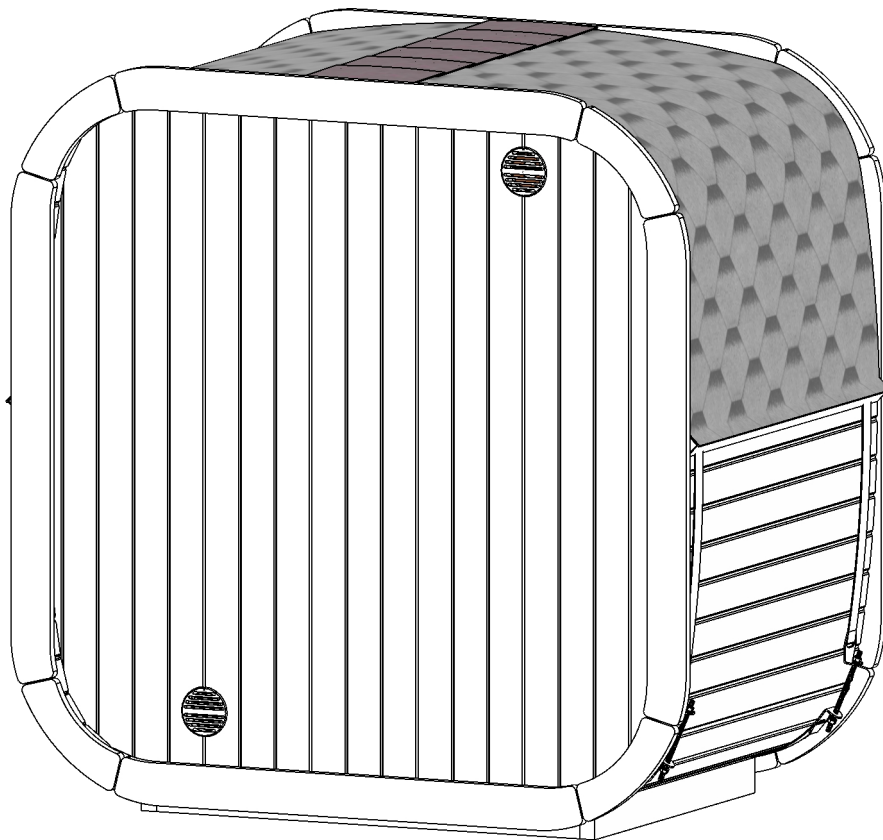


Sauna CUBE 125, Ø200

(Front: glass wall)



Sauna CUBE 125, Ø200

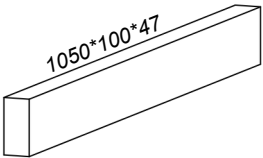
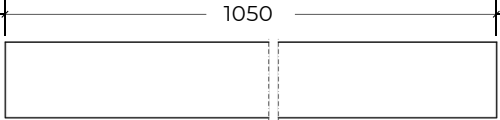
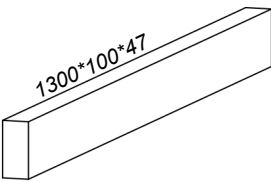
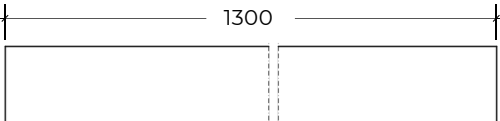
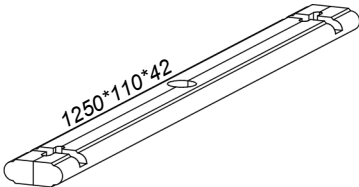
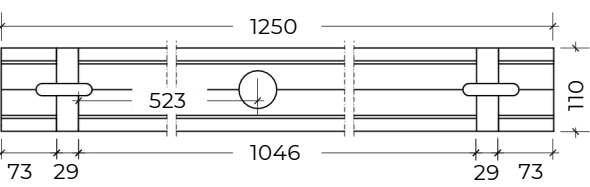
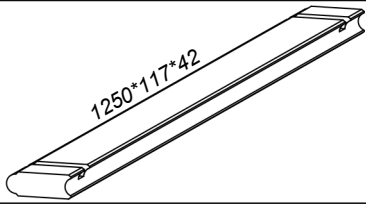
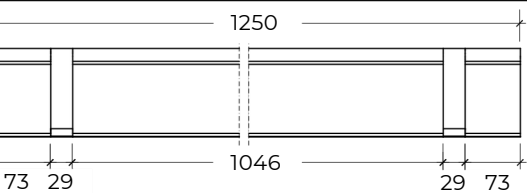
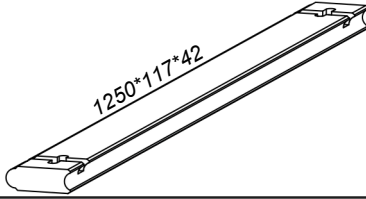
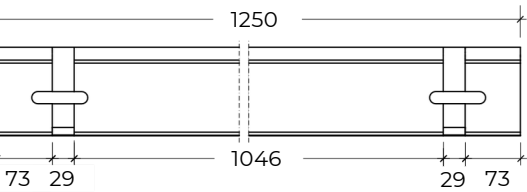
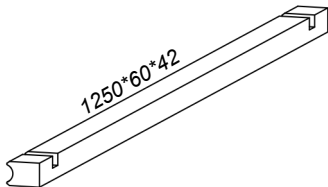
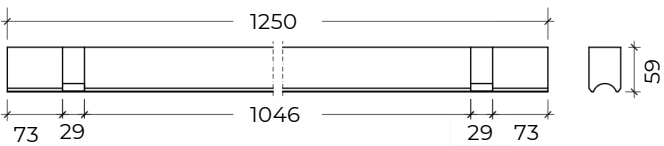
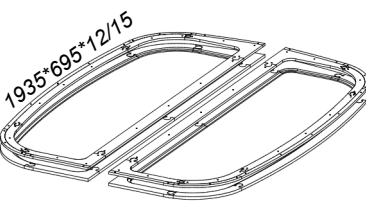
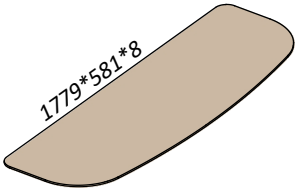
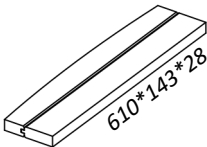
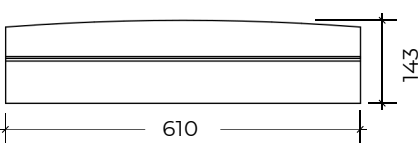
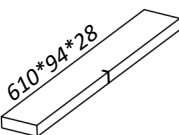
















Note: Please read manual before construction.











(TIC20/125KE-PT01)











Sauna CUBE 125,Ø200

Details list 1/4


DET 1	x2		
Article. K-SM100/1050			
DET 2	x3		
Article. K-SM100/1300			
DET 3	x1		
Article. T-STL117/1250XLM02			
DET 3a	x65		
Article. T-STL117/1250-01			
DET 3a/H	x2		
Article. T-STL117/1250-01X			
DET 6 DET 3vastaspool	x2		
Article. T-STL117/1250XL-01			
DET Frame (Front glass-wall)	x1		
Article. IC-20-TKE12/15-USA			
DET Glass (Front glass-wall)	x2		
Article. IC-20-ES			
DET Ta	x1		
Article. K-SL117/610UK1			
DET Tb	x1		
Article. K-TL94/610J			

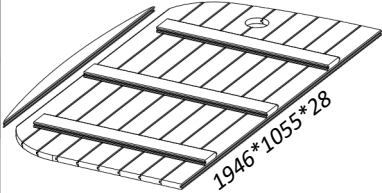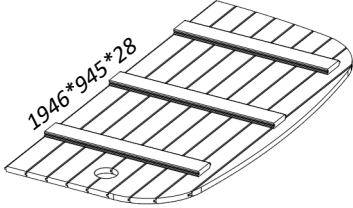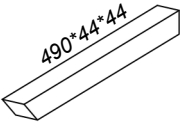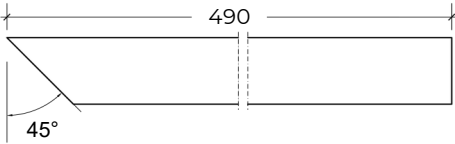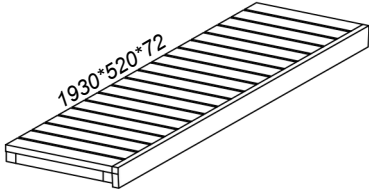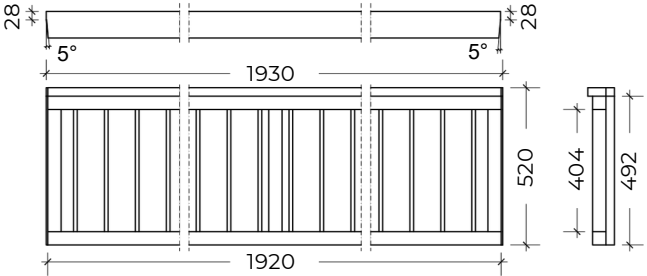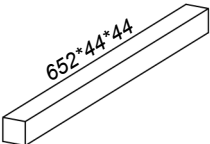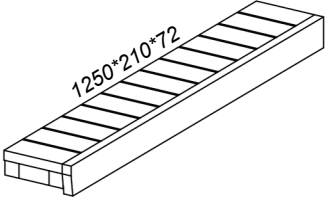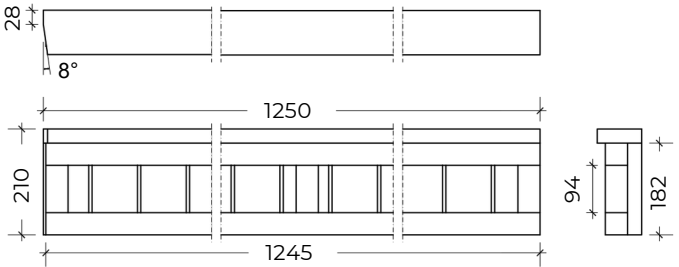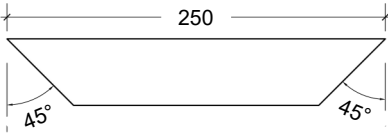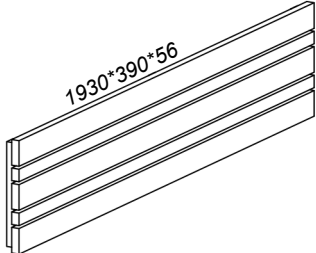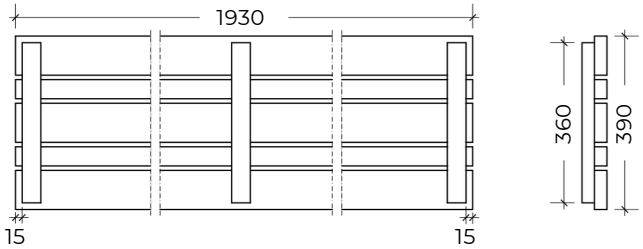DET Y1	x1		
Article. T-IC20-PTS/28-V			
DET Y2	x1		
Article. T-IC20-PTS/28-P			
DET 10a	x2		
Article. K-HP44/490XP			
DET 10c	x1		
Article. K-HP44/170			
DET 10	x1		
Article. TL-LAMOD-1930-01			
DET 11a	x1		
Article. K-HP44/652			
DET 11	x1		
Article. TL-LAMOD-1250-01			
DET 11b	x1		
Article. K-HP44/250XP-XP			
DET 14	x1		
Article. TL-STMOD-1930-01			

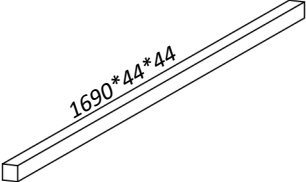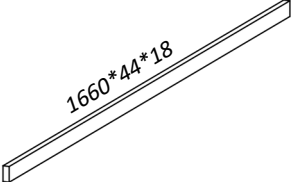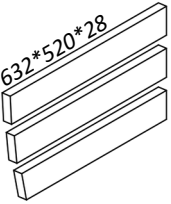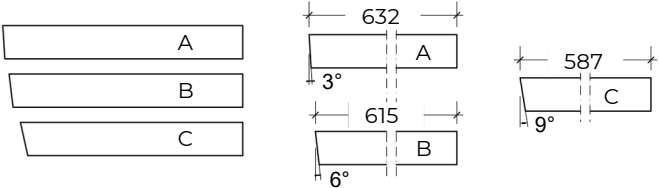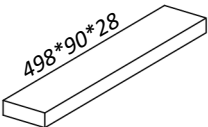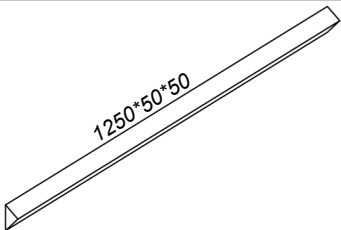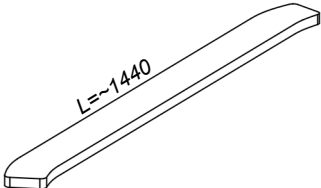
DET 21	x1		
Article. U-6/17			
DET 21c	x2		
Article. K-HP44/1690			
DET 21d	x2		
Article. K-HP44/680			
DET 21a	x2		
Article. K-HL44/1660			
DET 21b	x2		
Article. K-HL44/650			
DET 16	x1		
Article. TL-PIMOD-632-02			
DET 15	x1		
Article. TL-LAV90/498			
DET 22	x2		
Article. T-STL-1250-XX			
DET 25a	x8		
Article. MU-OL-IC-20-1			
DET 25b	x8		
Article. MU-OL-IC-20-2			

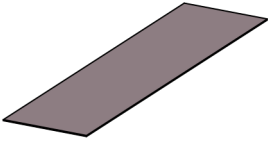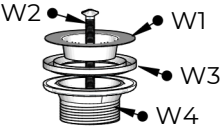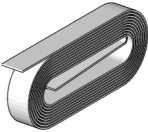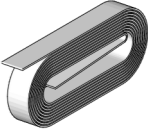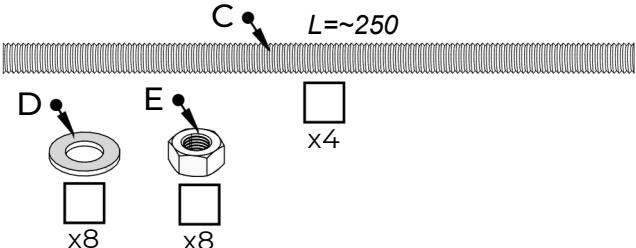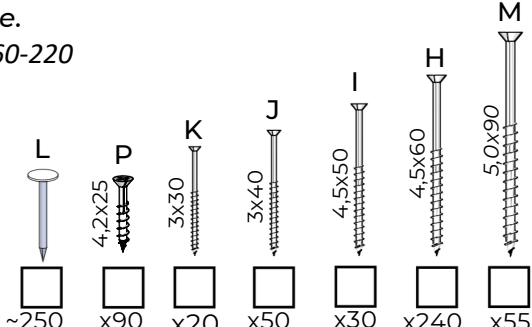Underlay felt	8 m.		
Article. KAT-AL			
DET N	x5		
Article. KAT-HAR			
DET O	x42		
Article. KAT-SIN			
DET W	x1 kmpł		
Article. MU-TRAPP			
DET V	x4		
Article. KI-VIN-25/40/40-ZN			
DET A1	x2		
Article. MU-VIT10/2200			
DET A2	x2		
Article. MU-VIT10/5200			
DET B	x8		
Article. MU-VITKL-RV			
DET G	x1		
Article. MU-VENT-100-PU			
DET F	x3		
Article. MU-VENT-100-ZN			
Article. KI-KERL-12-RV4 		Article. KI-ICO-160-220 	

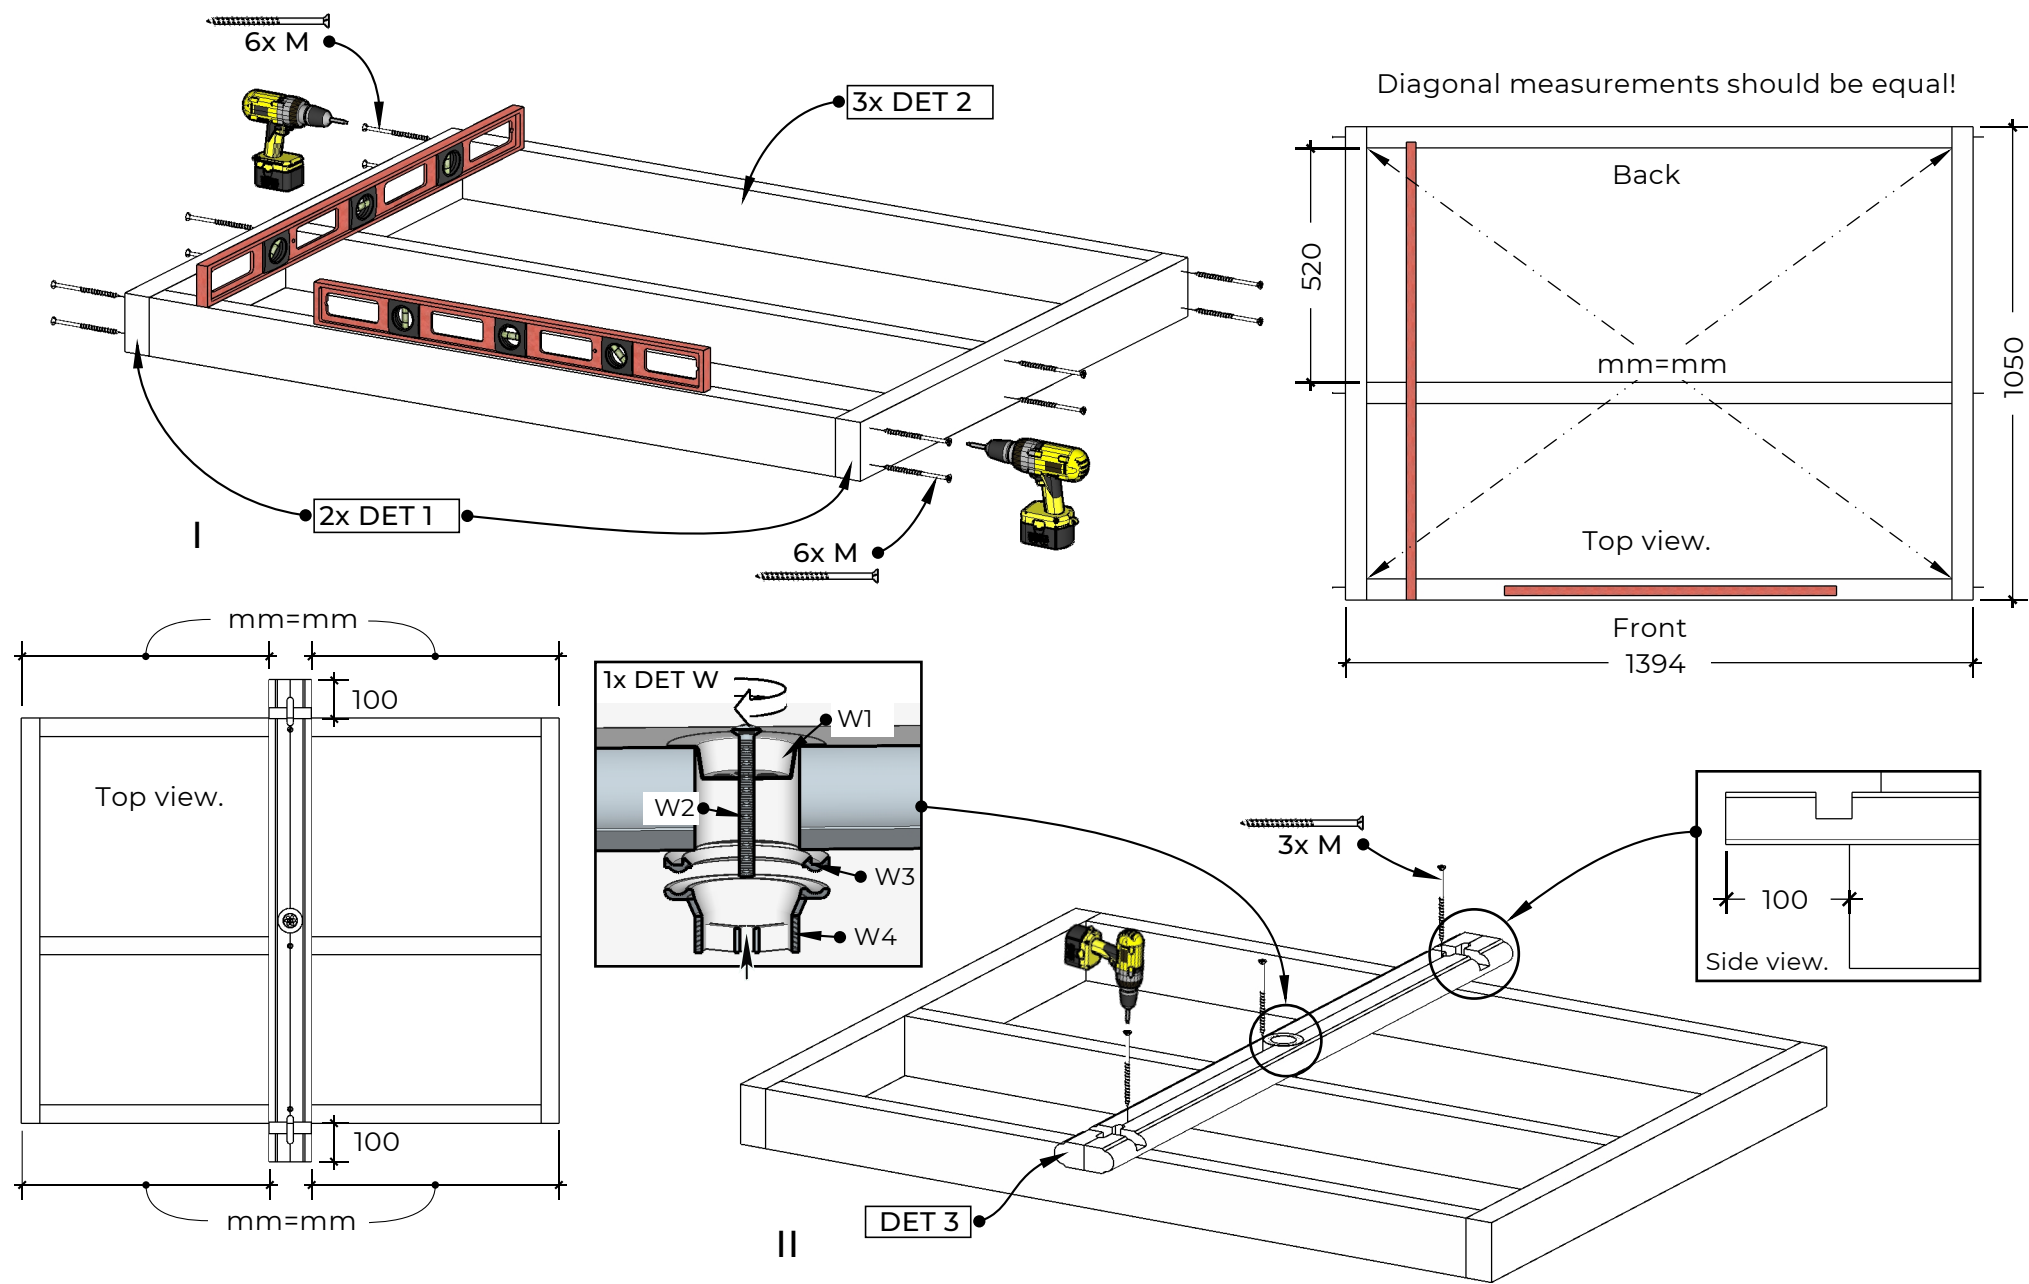
Sauna CUBE 125,Ø200



Sauna CUBE 125,Ø200

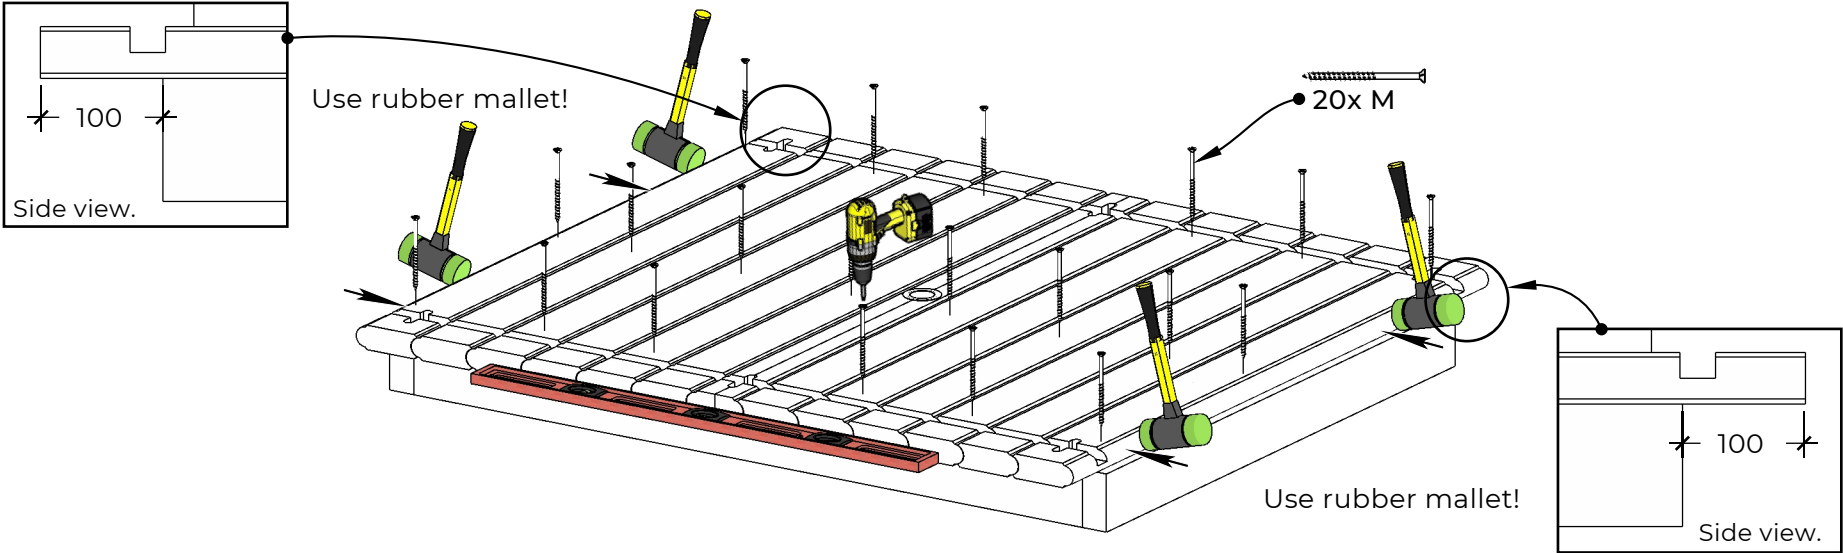

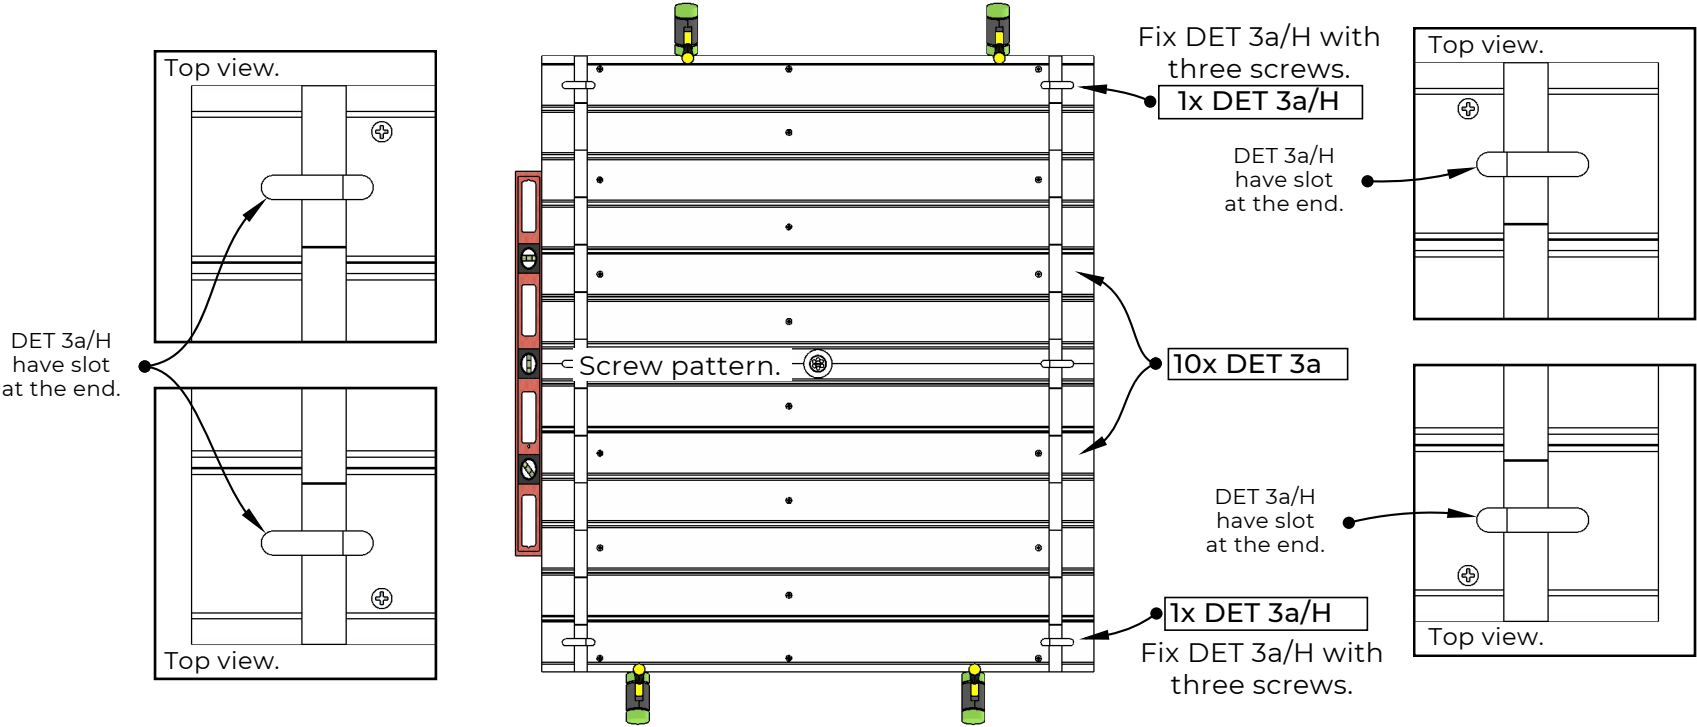
Fix screws over the one board, diagonally in every board.



(TIC20/125KE-PT01)


Sauna CUBE 125,Ø200

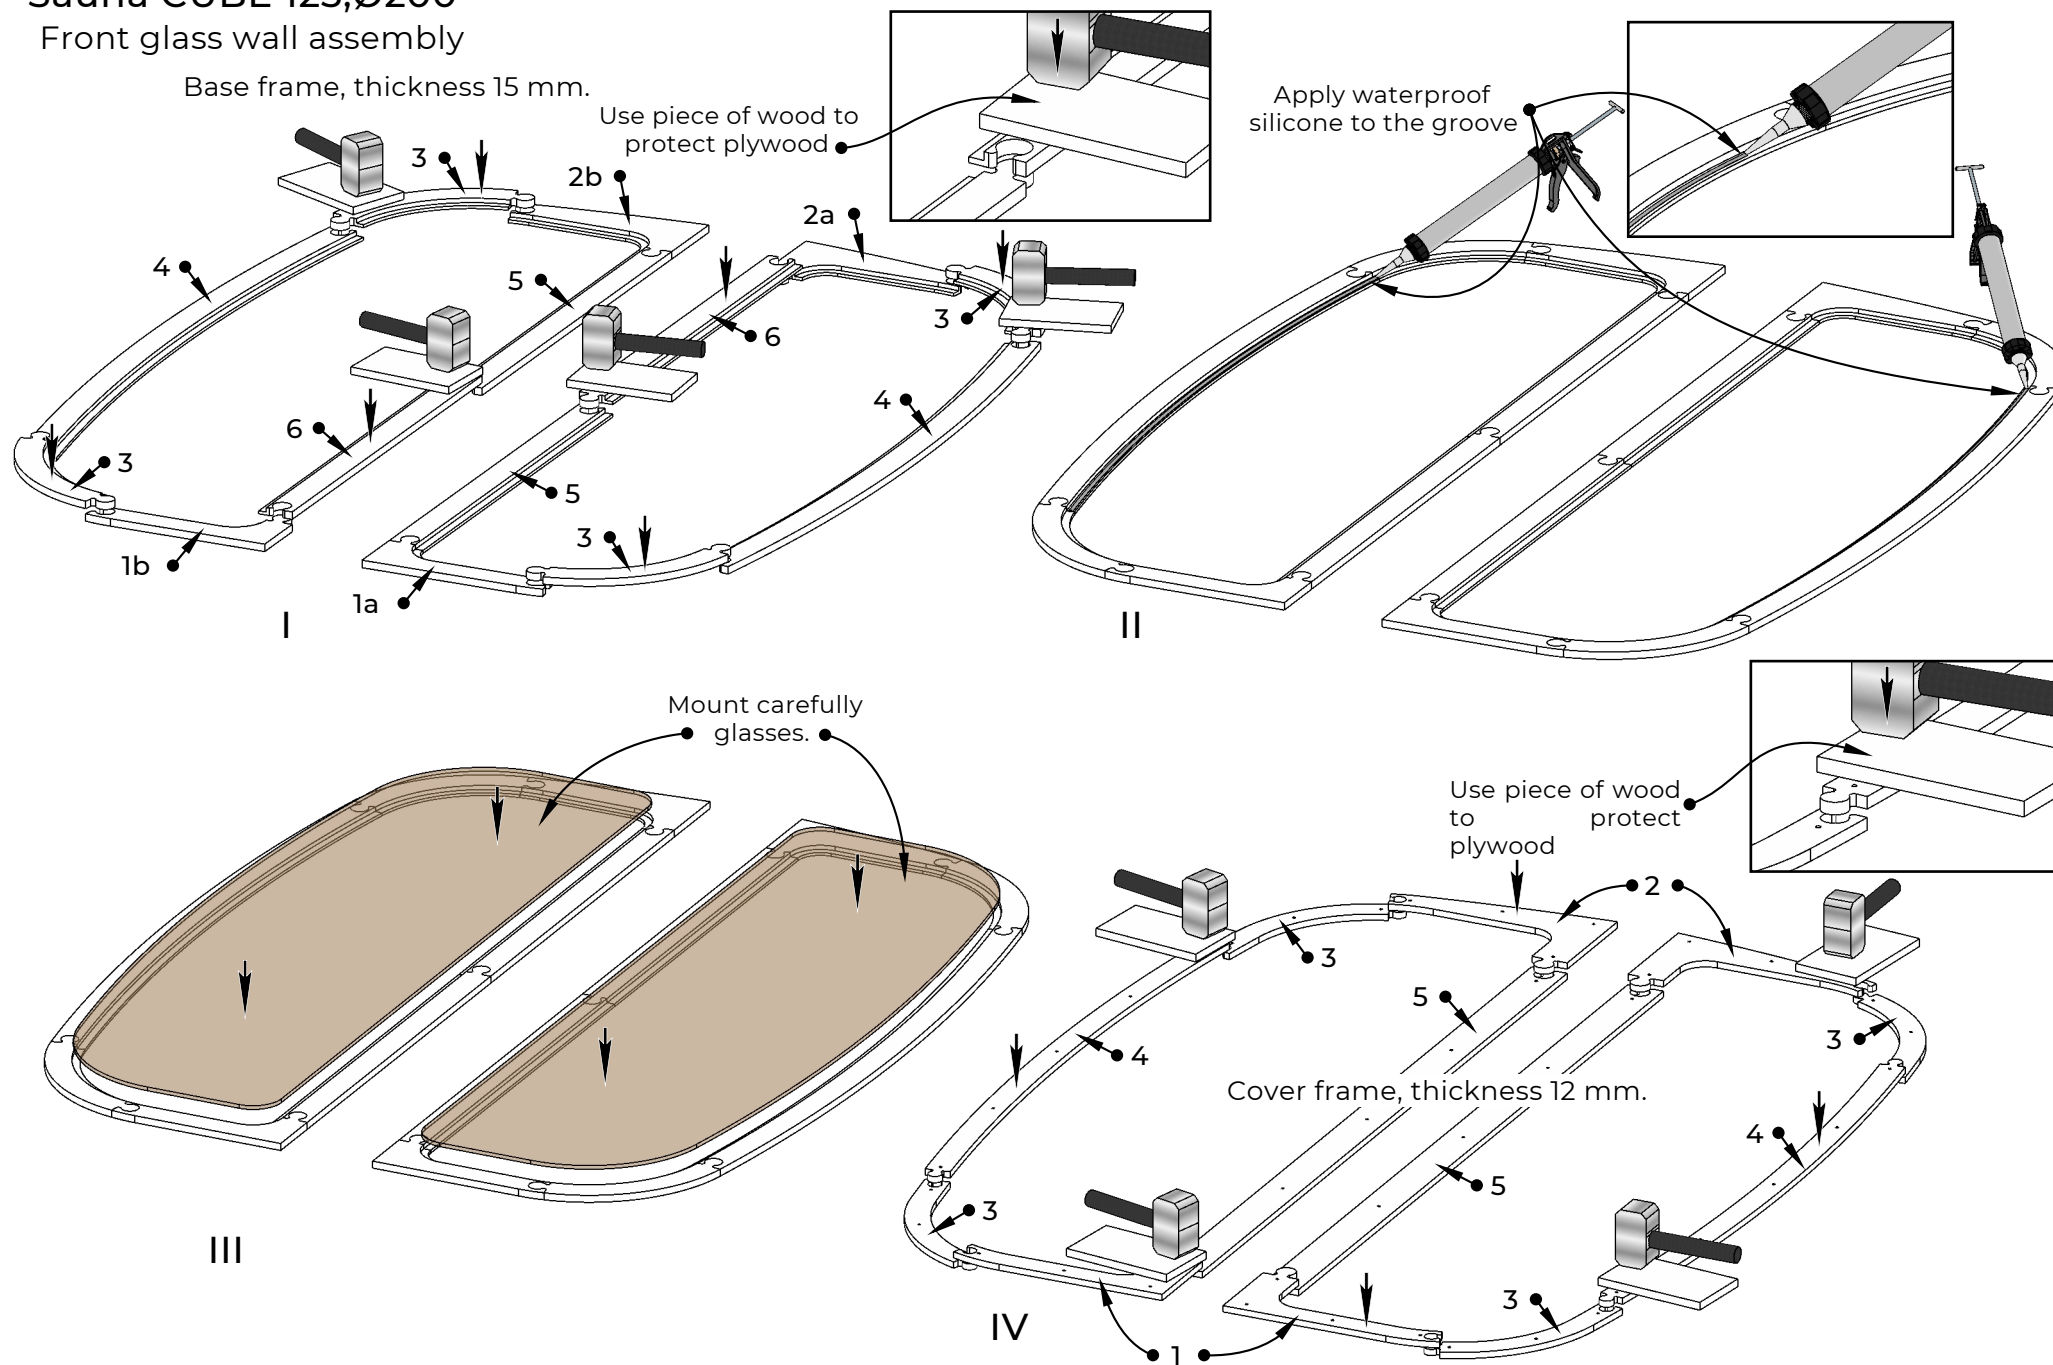Front glass wall assembly




Sauna CUBE 125,Ø200

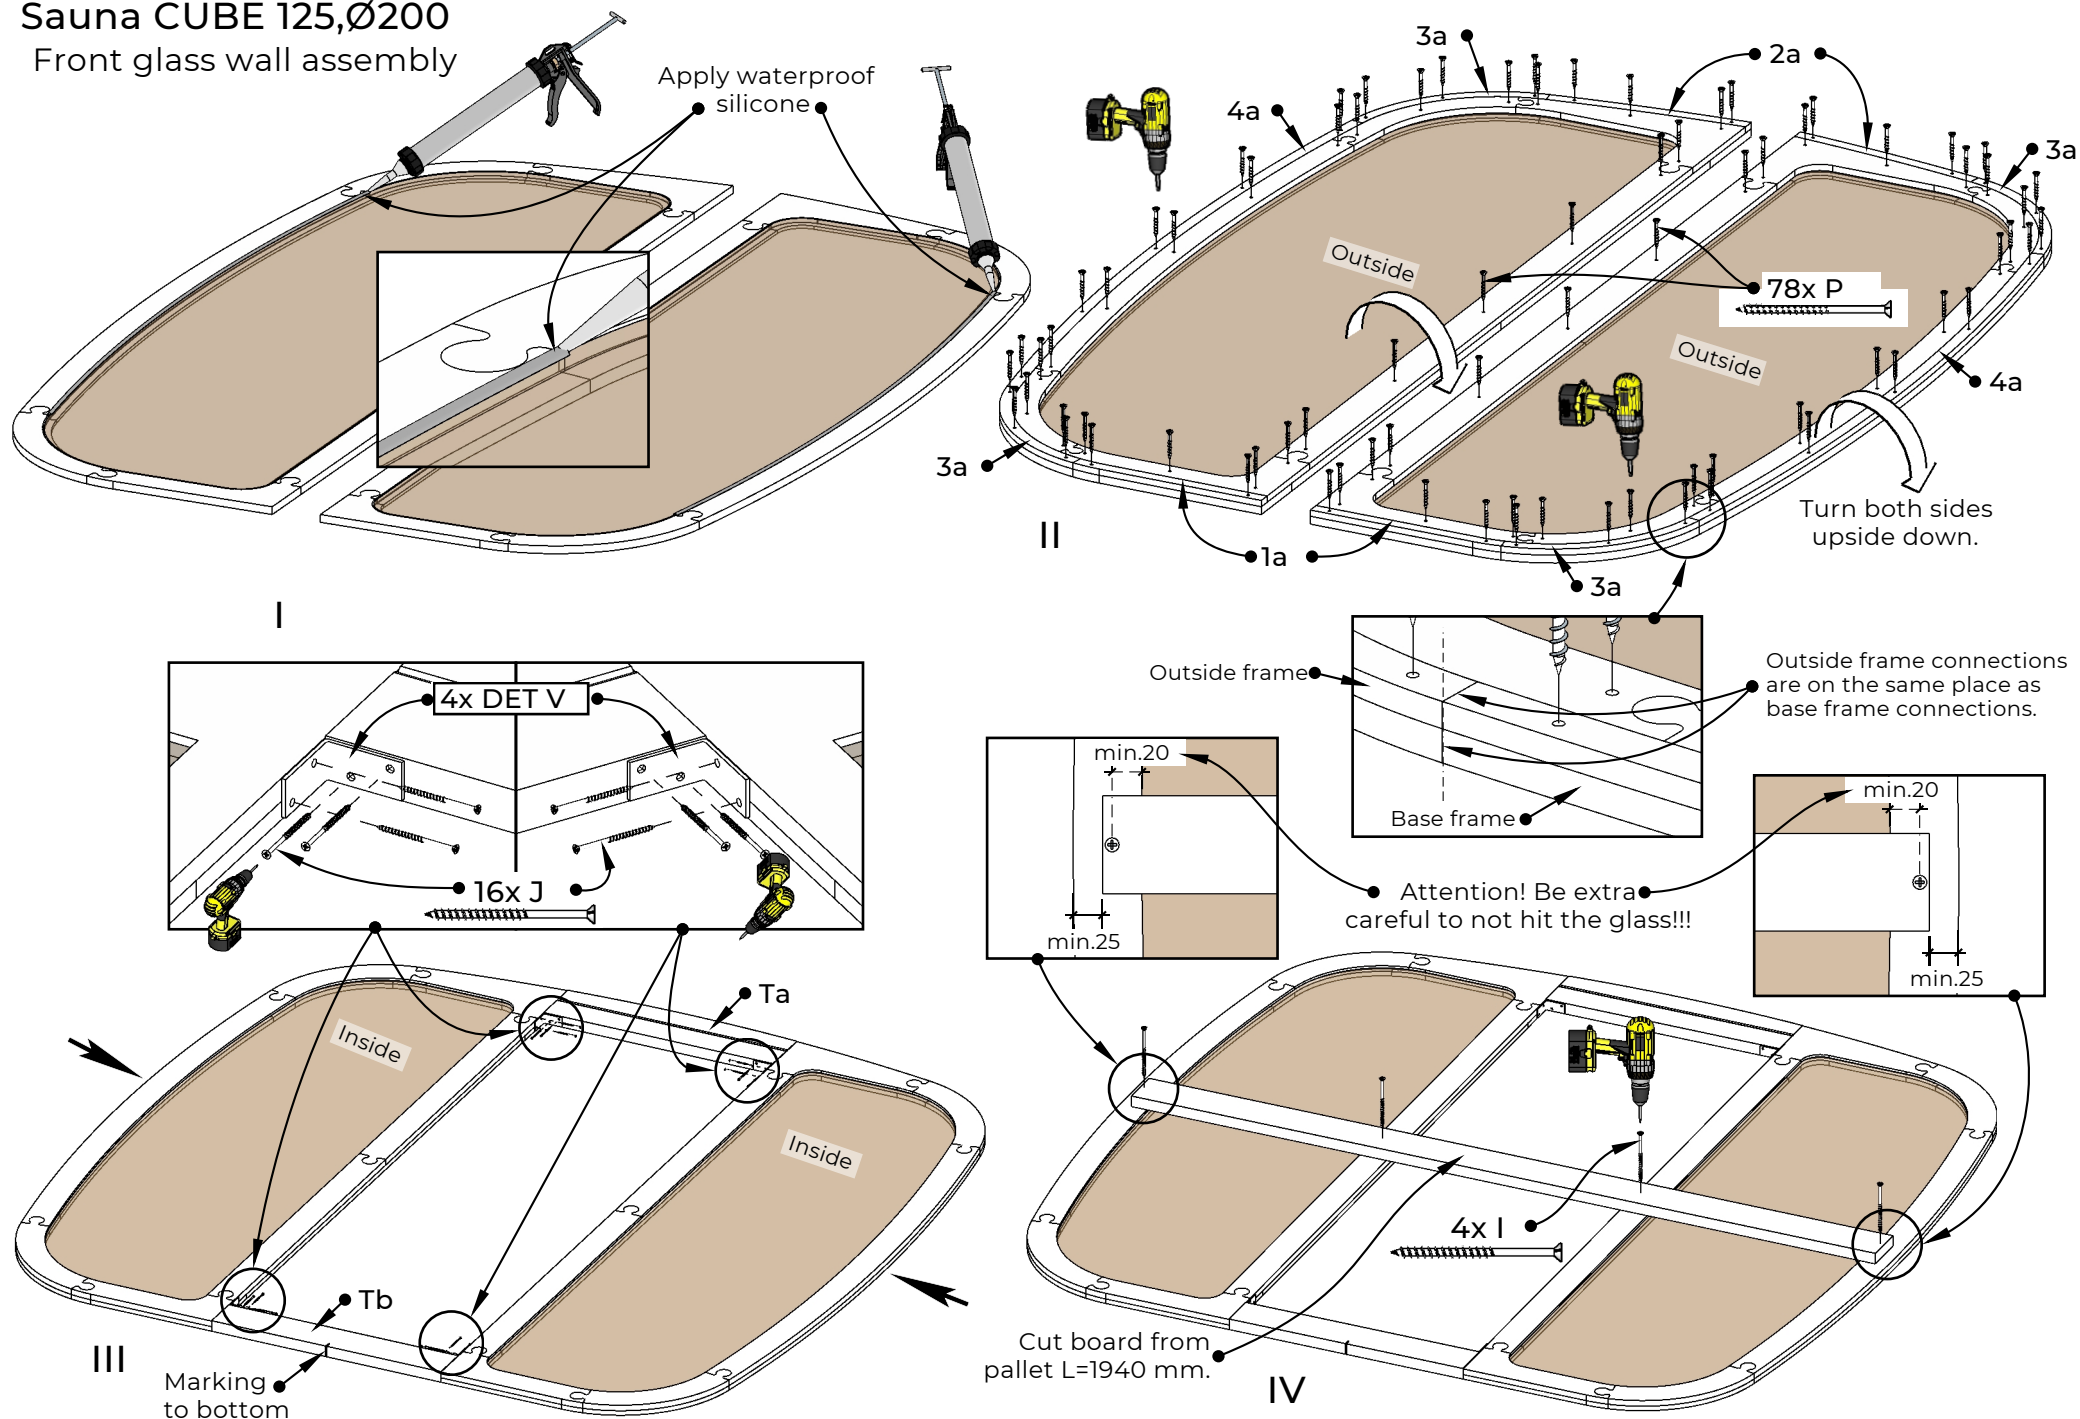Front glass wall assembly




Sauna CUBE 125,Ø200

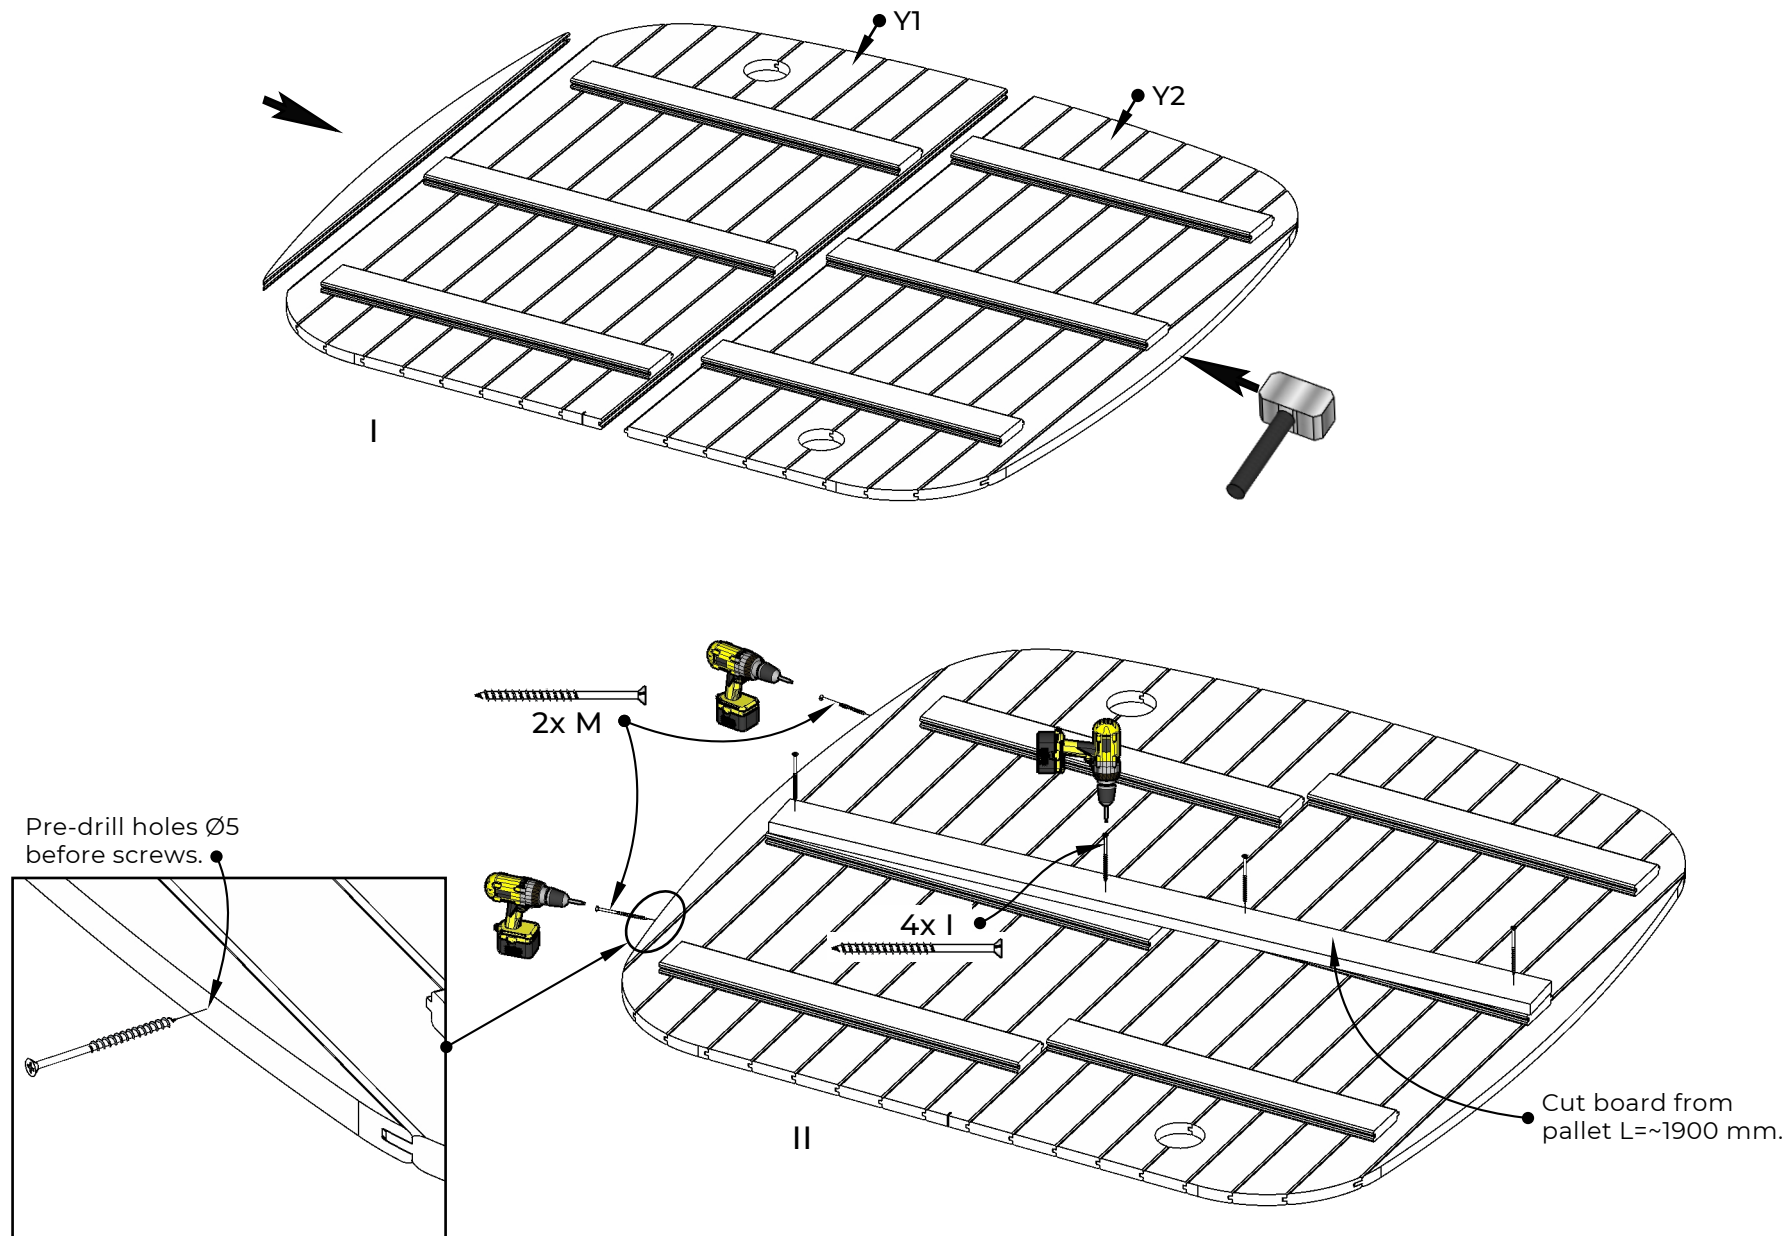Wooden back wall assembly





Sauna CUBE 125, Ø200

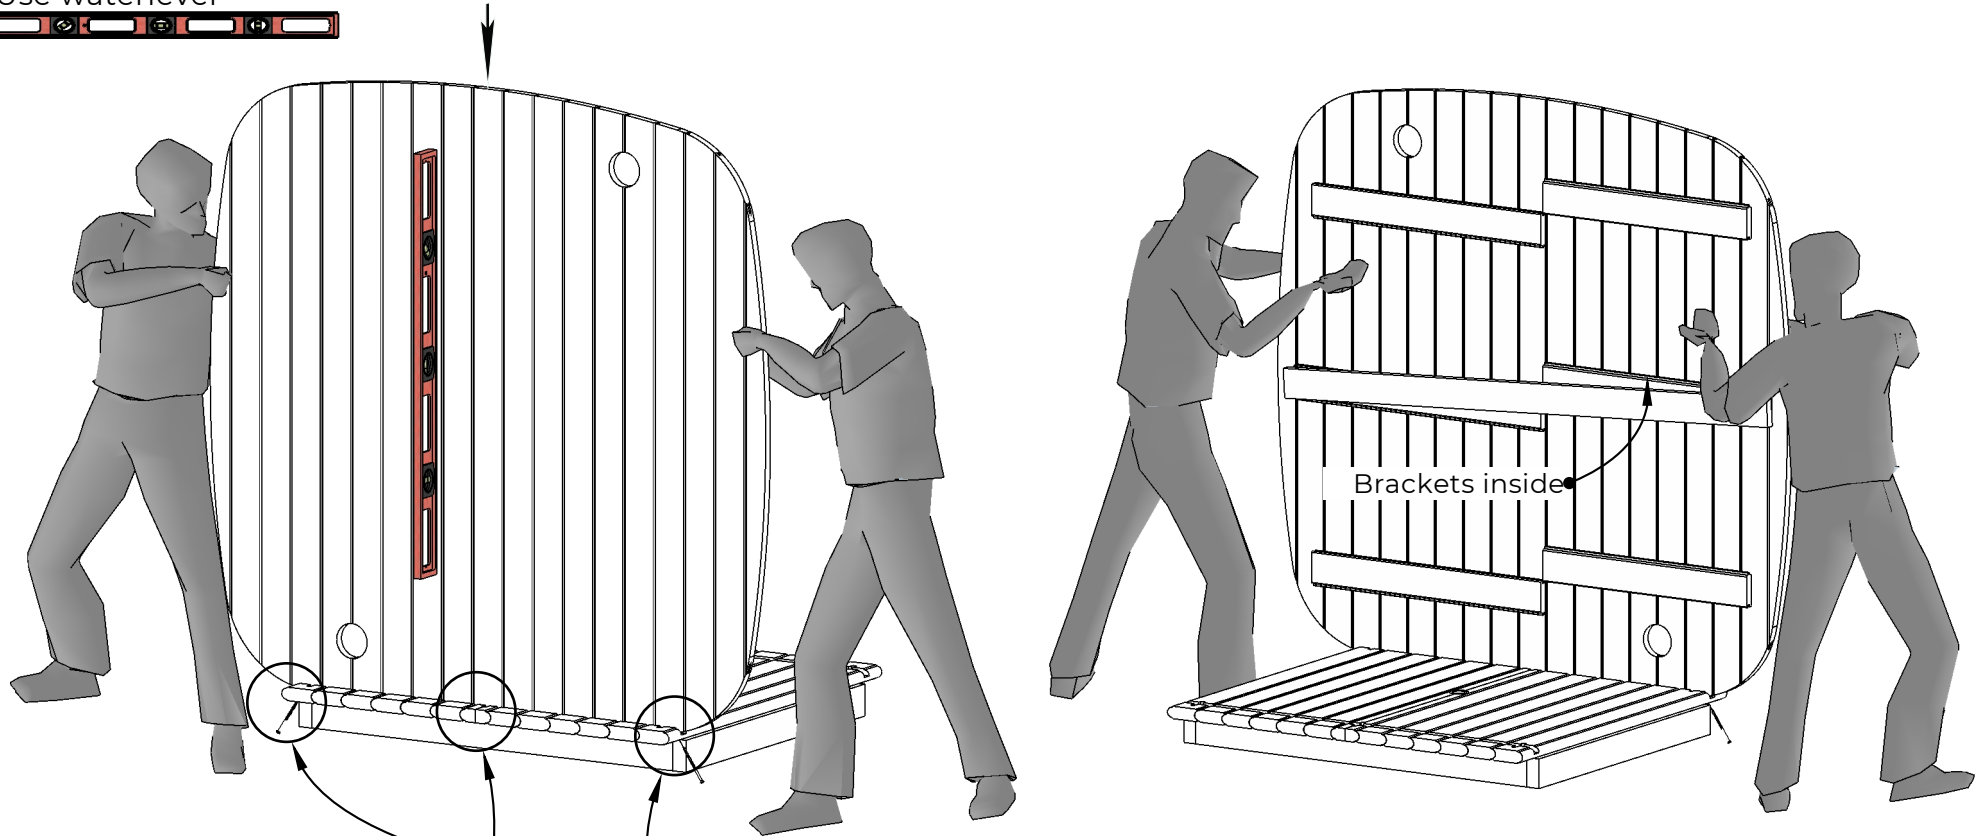Use waterlevel







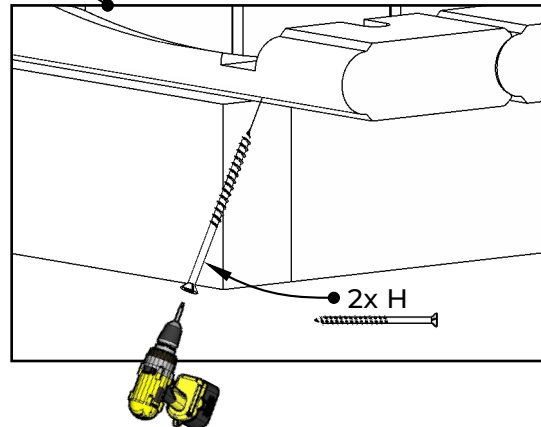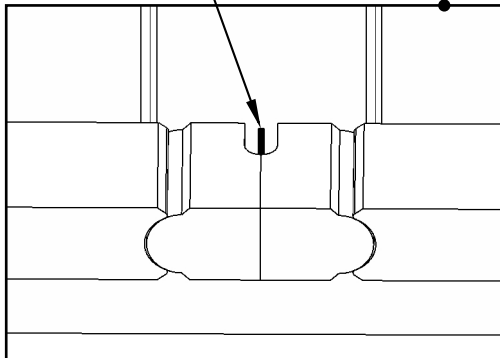Make sure the marking on the wall is centered in the notch.





Sauna CUBE 125, Ø200

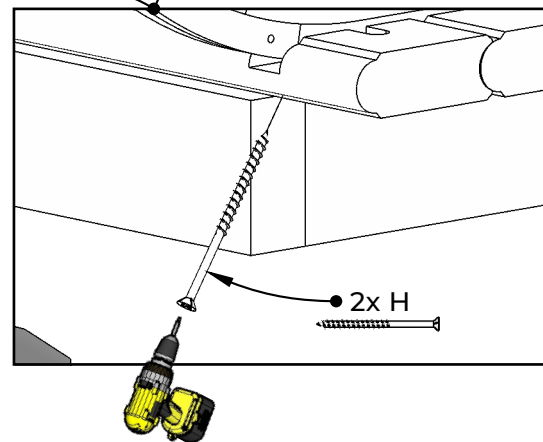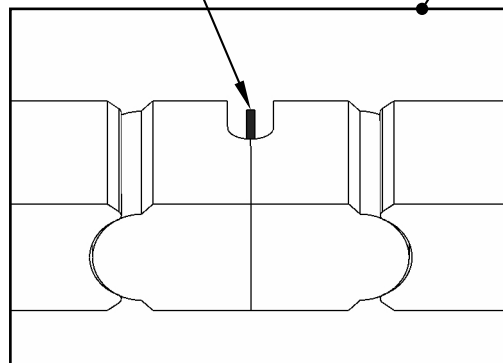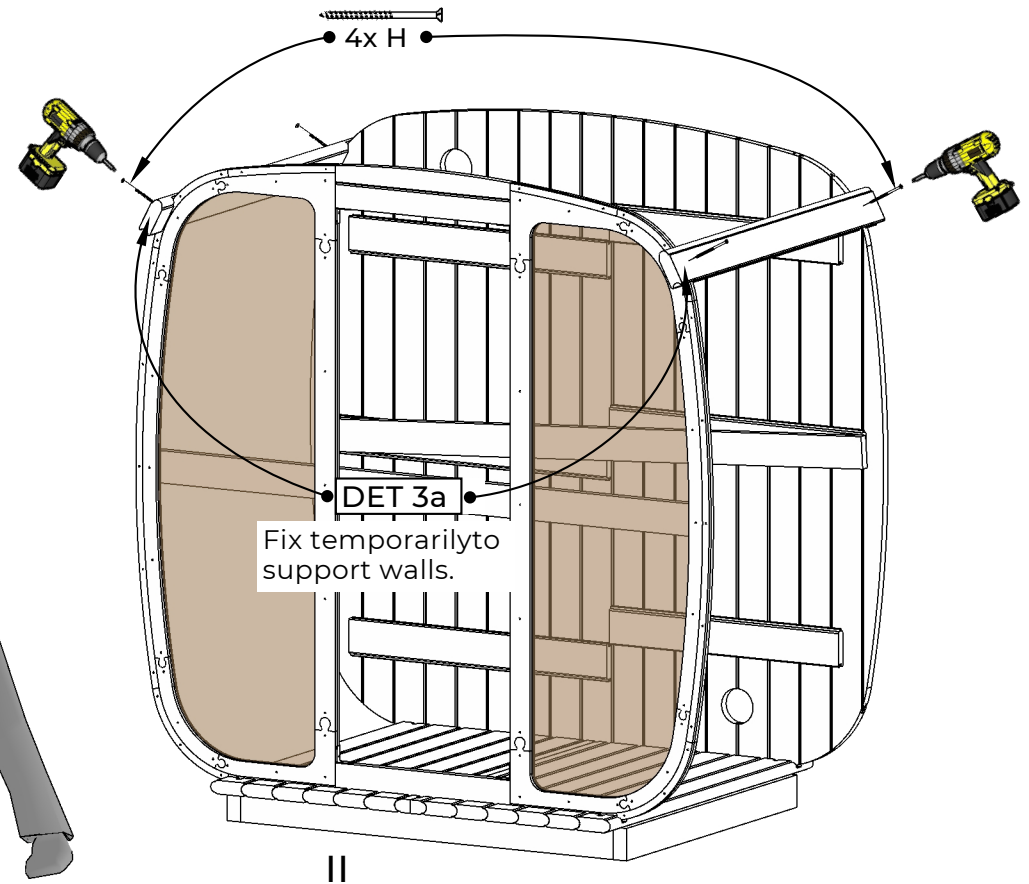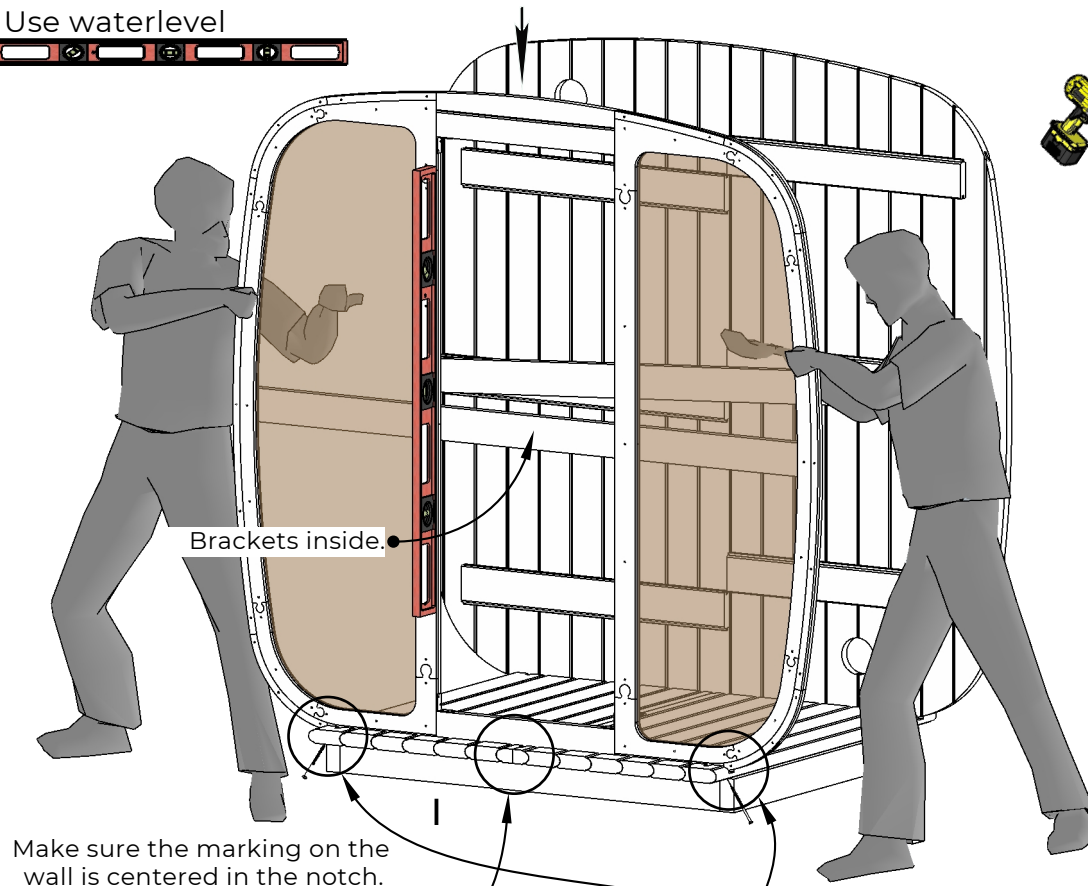Use waterlevel






Sauna CUBE 125,Ø200

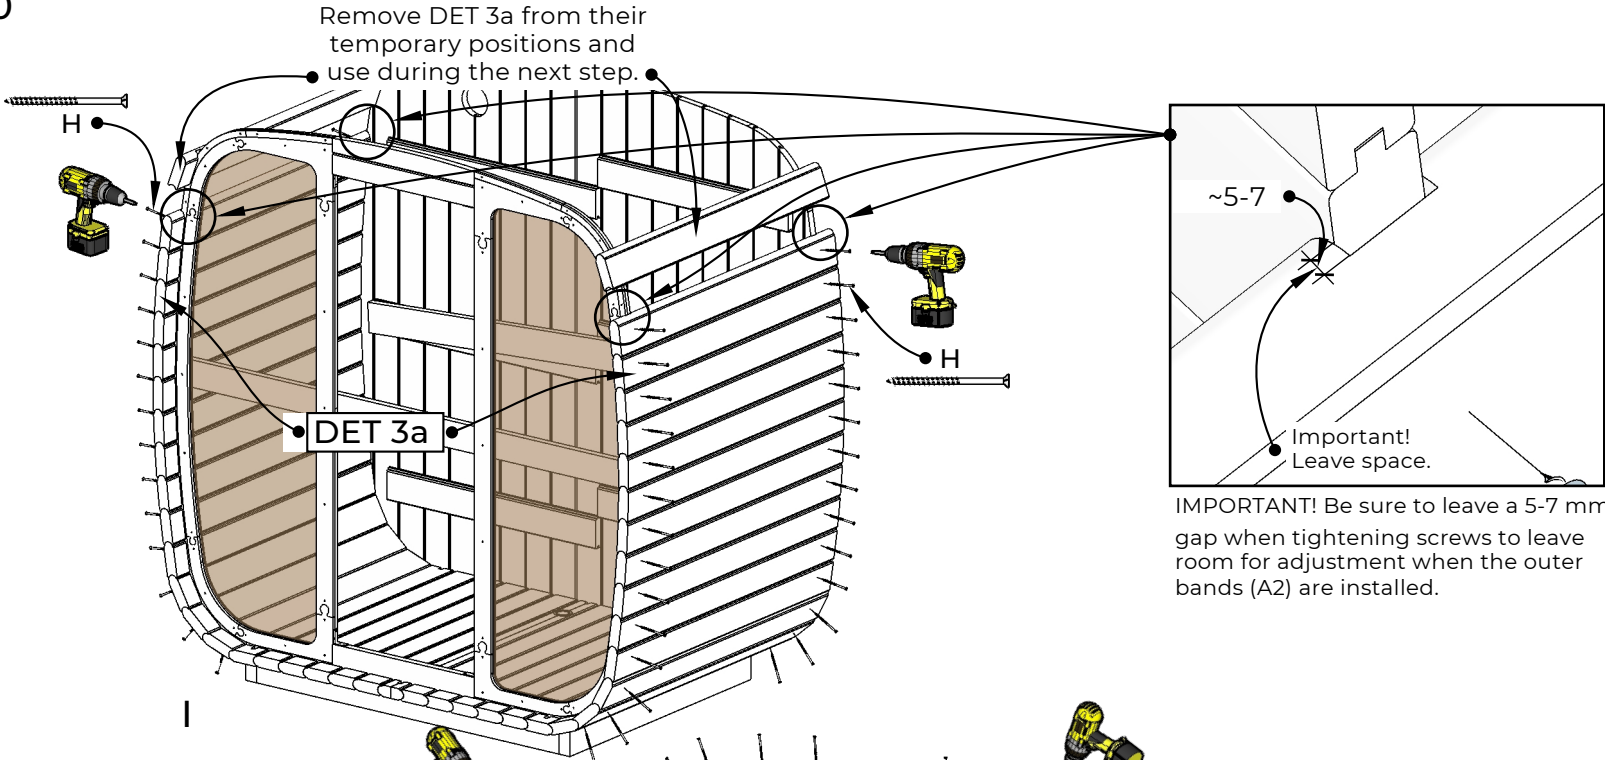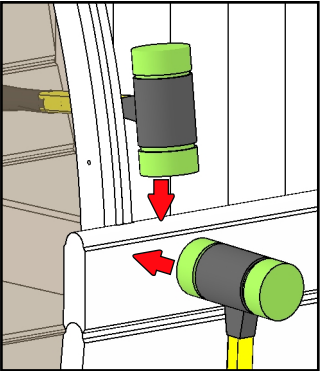Use rubber mallet!




IMPORTANT! Be sure to leave a 5-7 mm. gap when tightening screws to leave room for adjustment when the outer bands (A2) are installed.

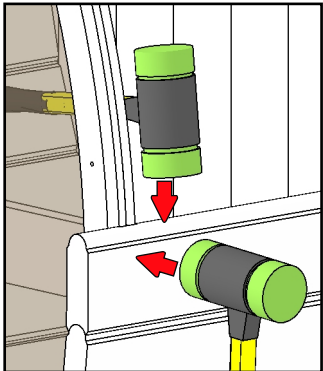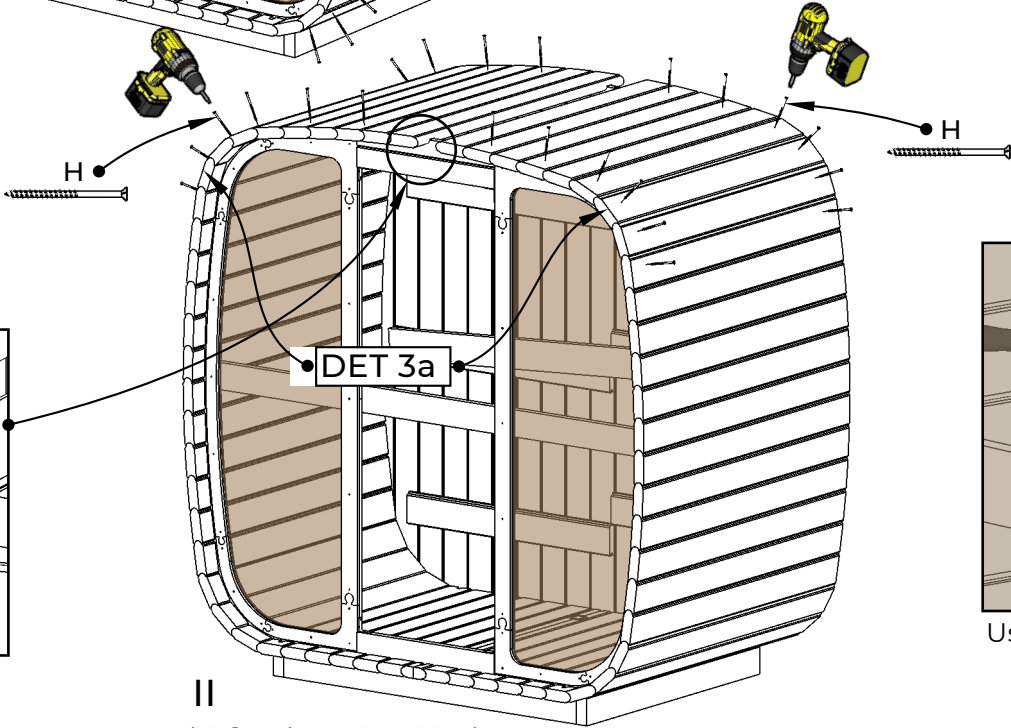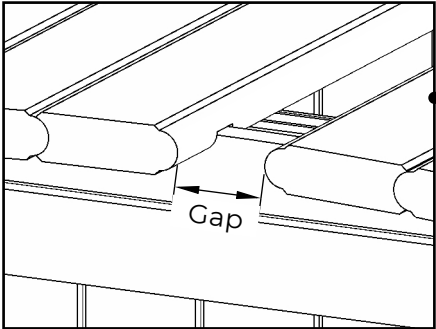
See the next page.





Use rubber mallet!

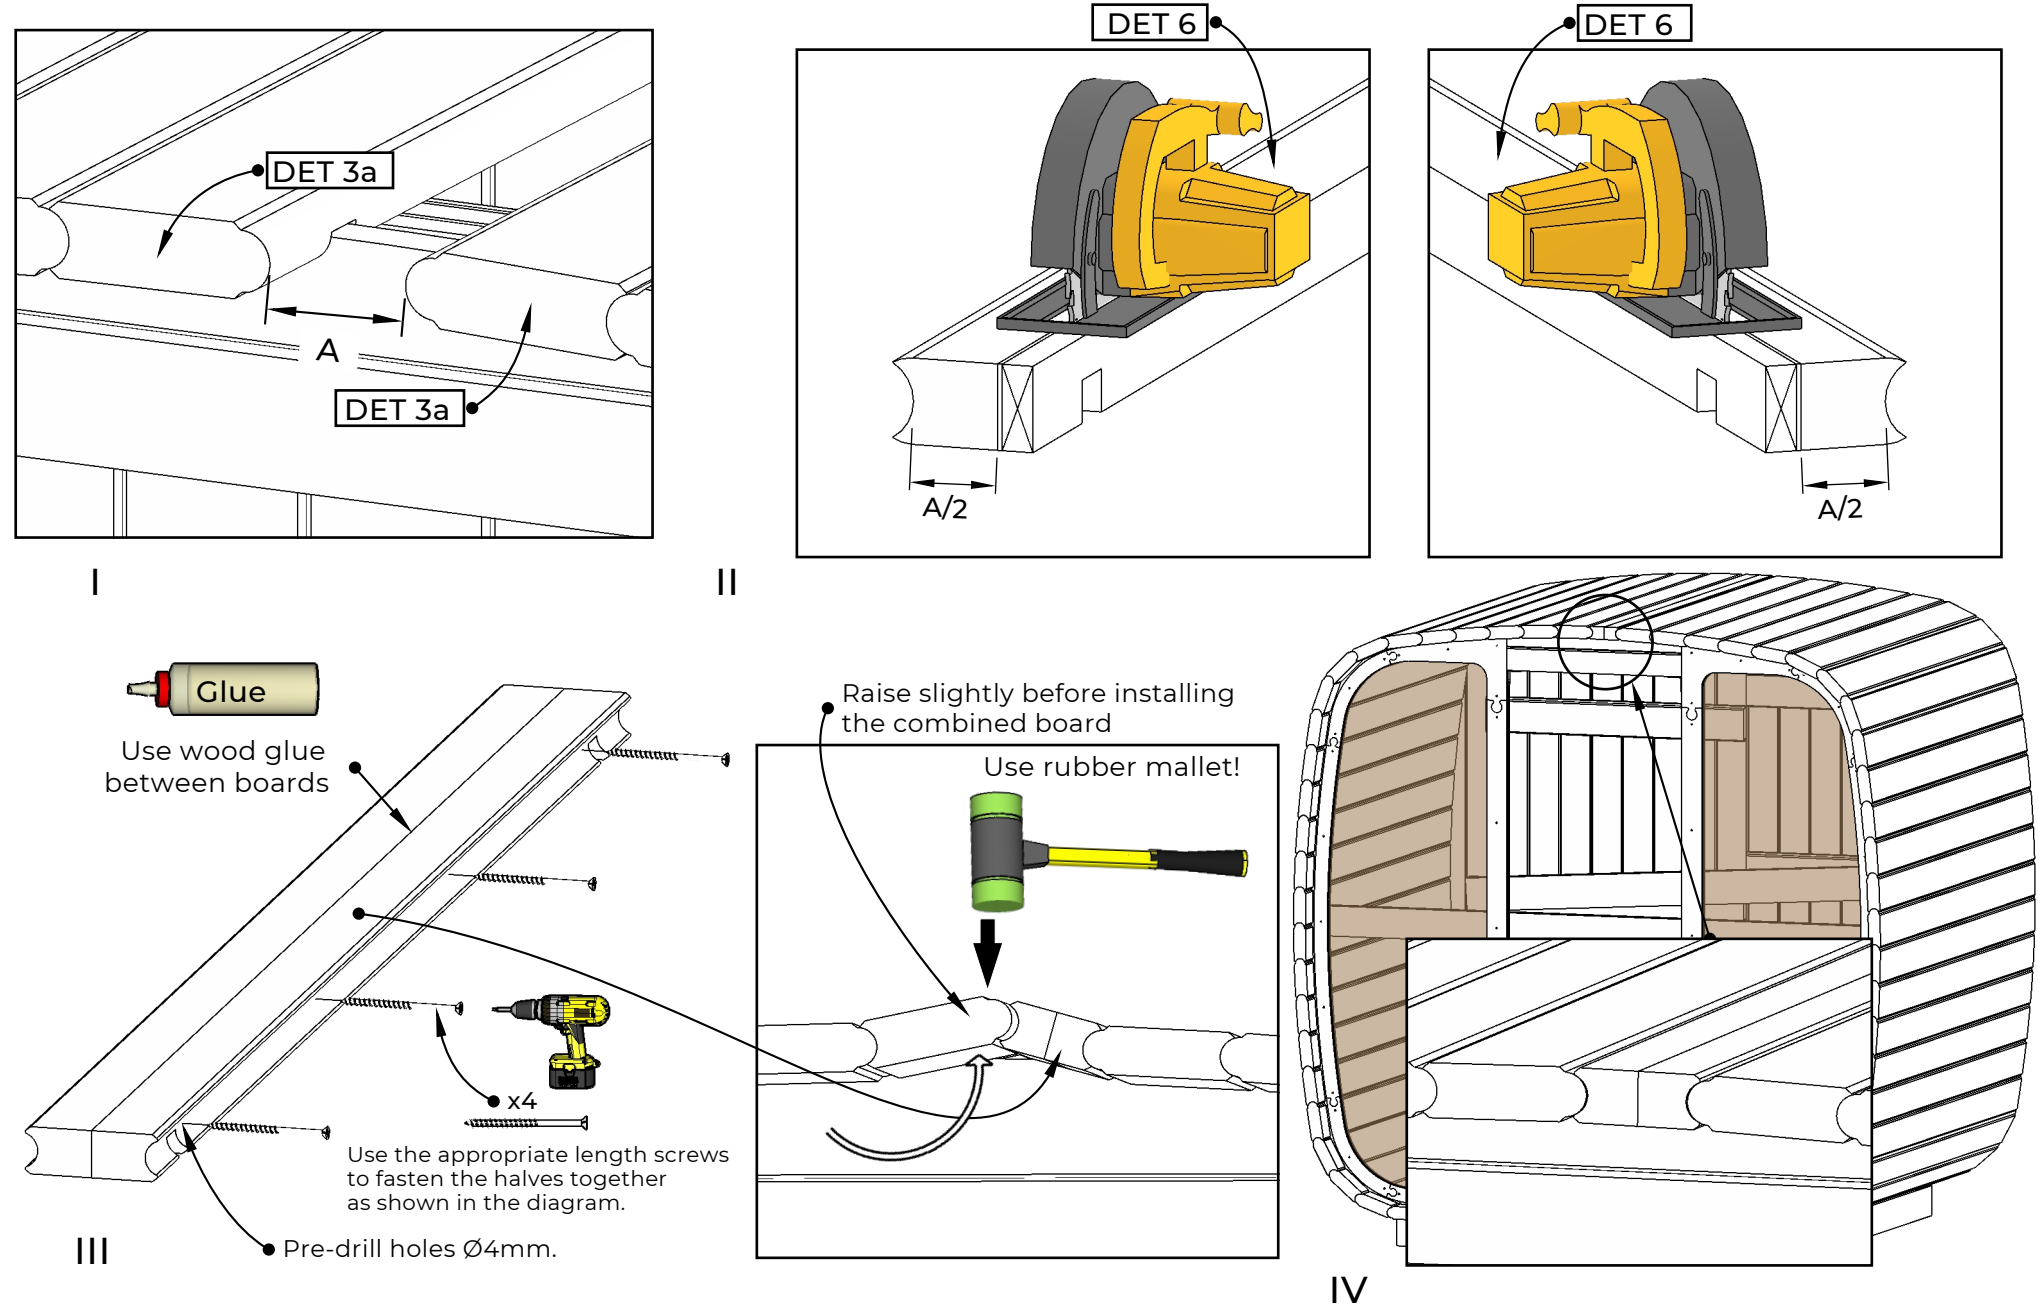


Sauna CUBE 125,Ø200

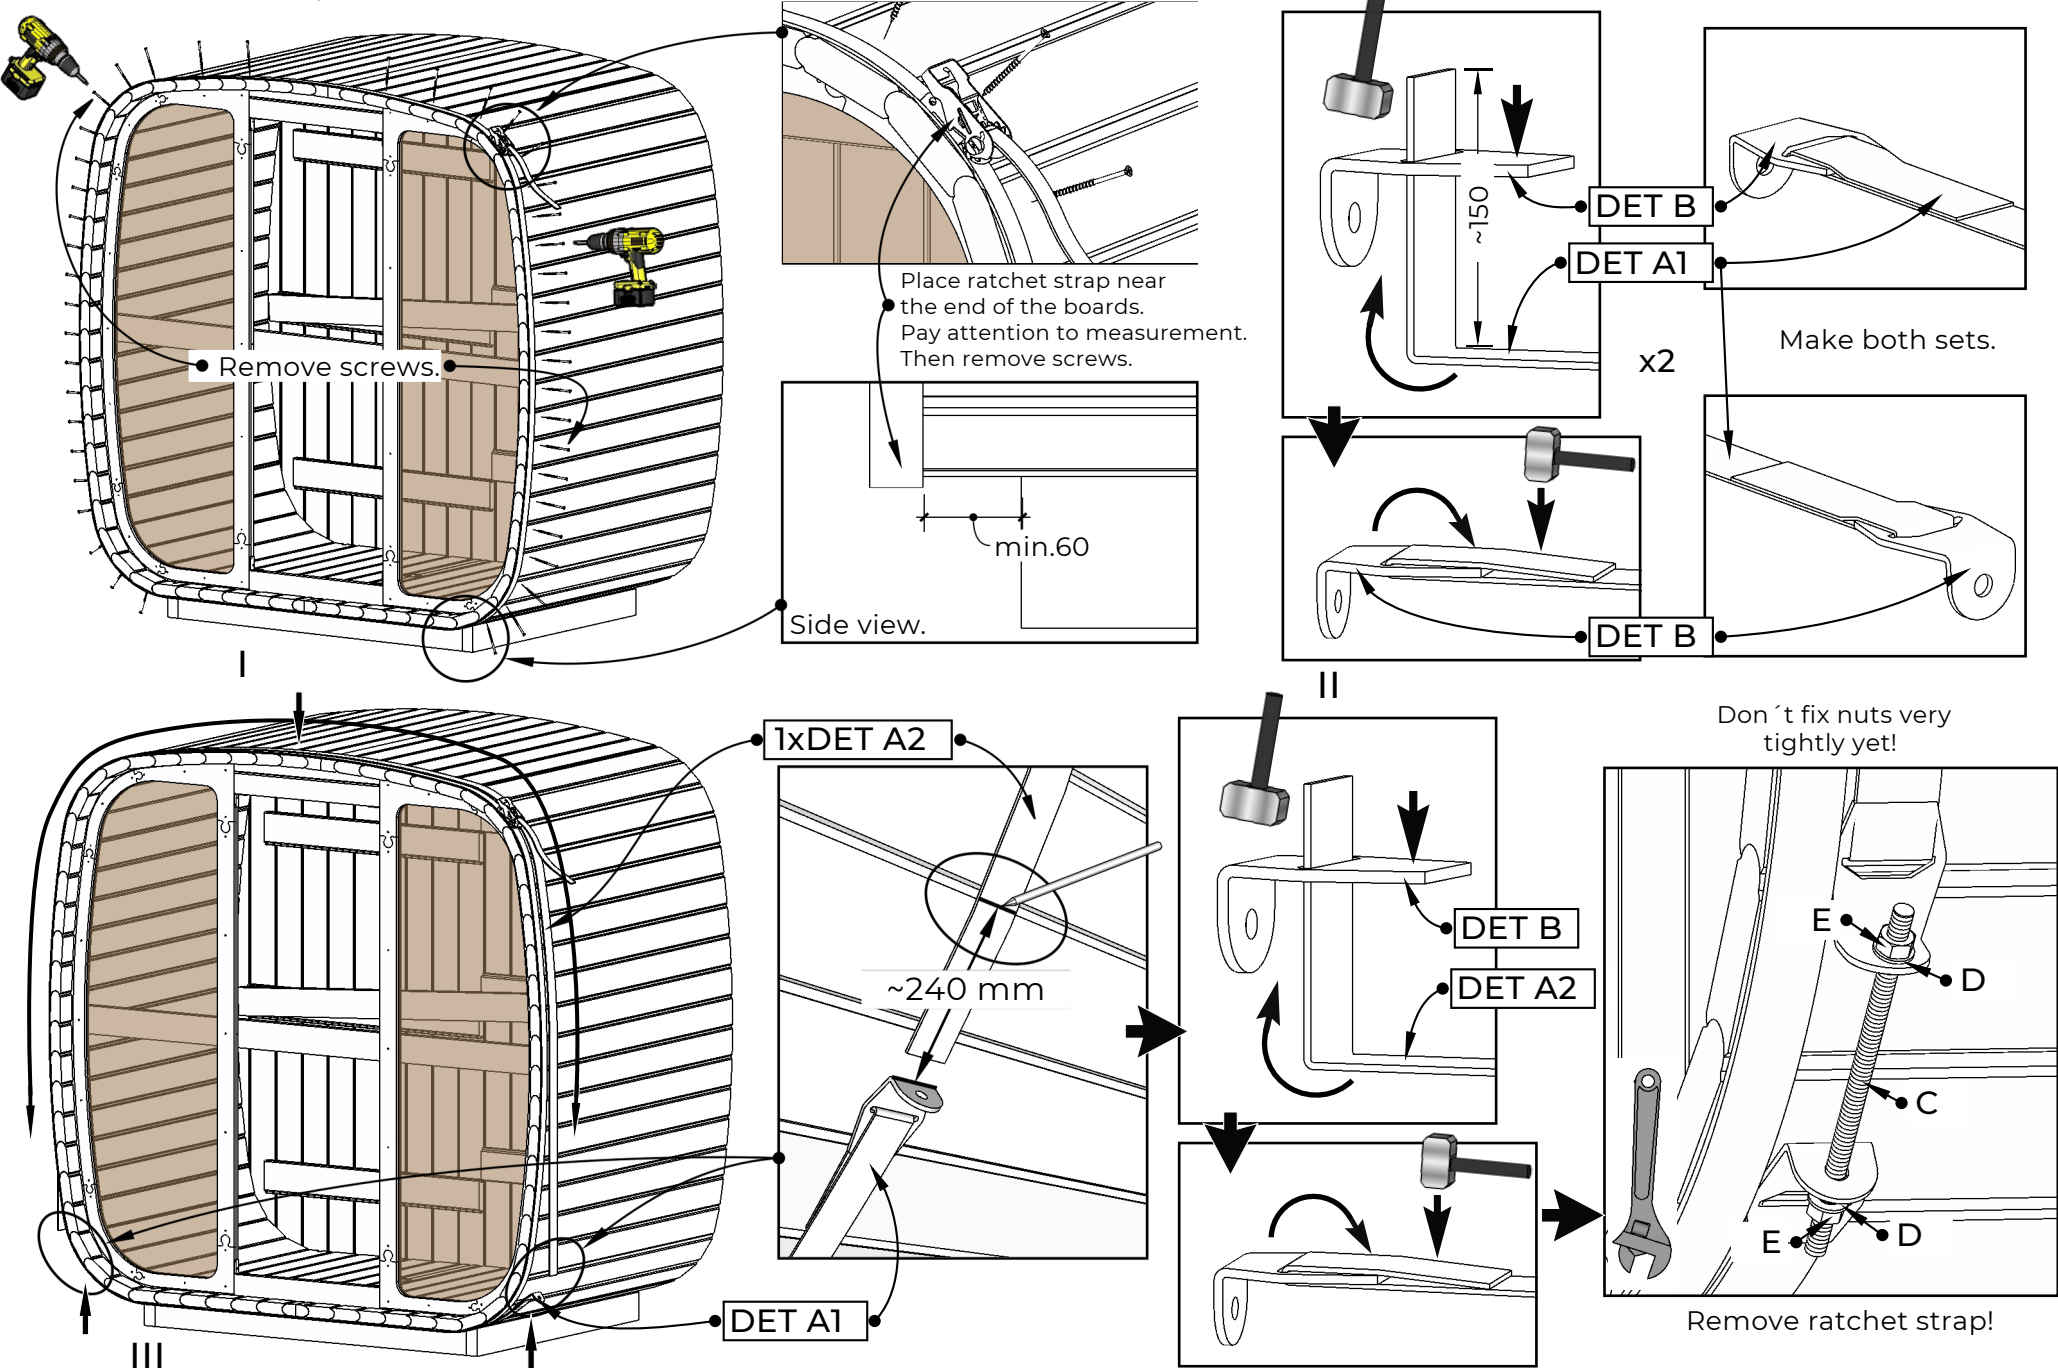



Sauna CUBE 125,Ø200

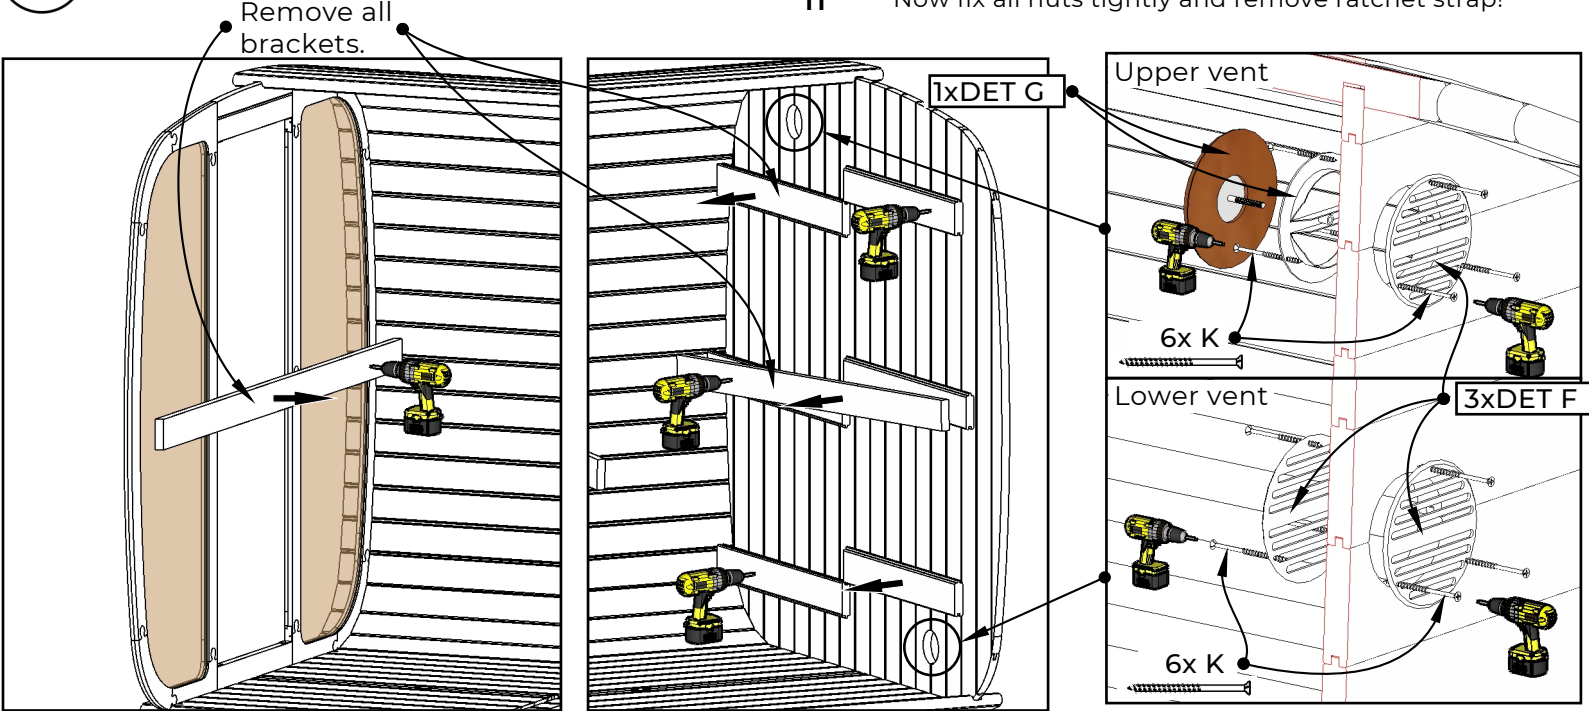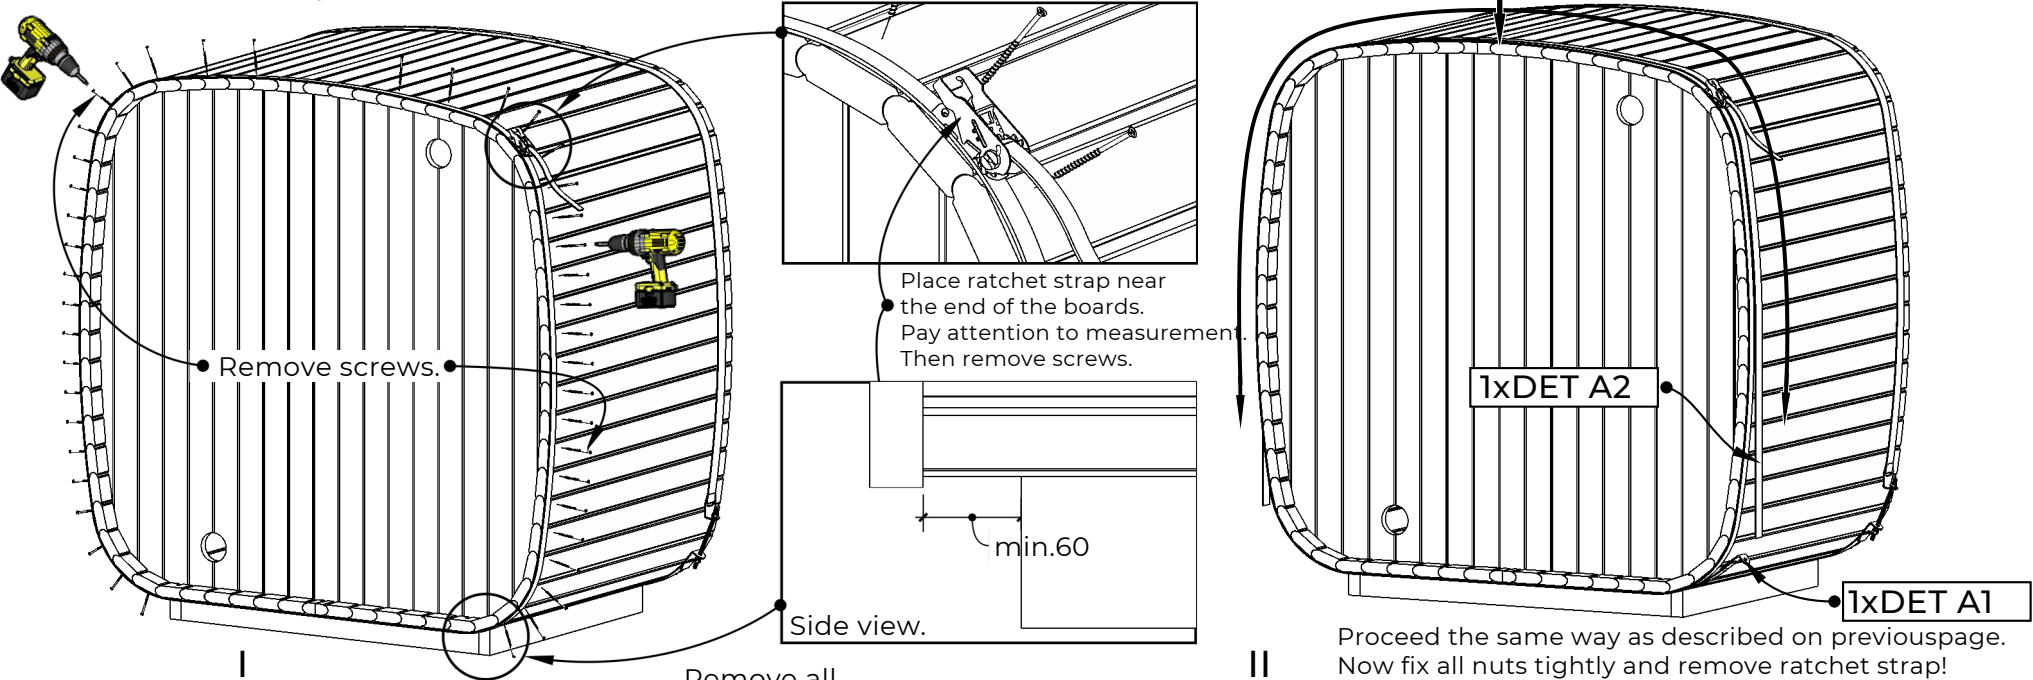

Use waterlevel for installation!

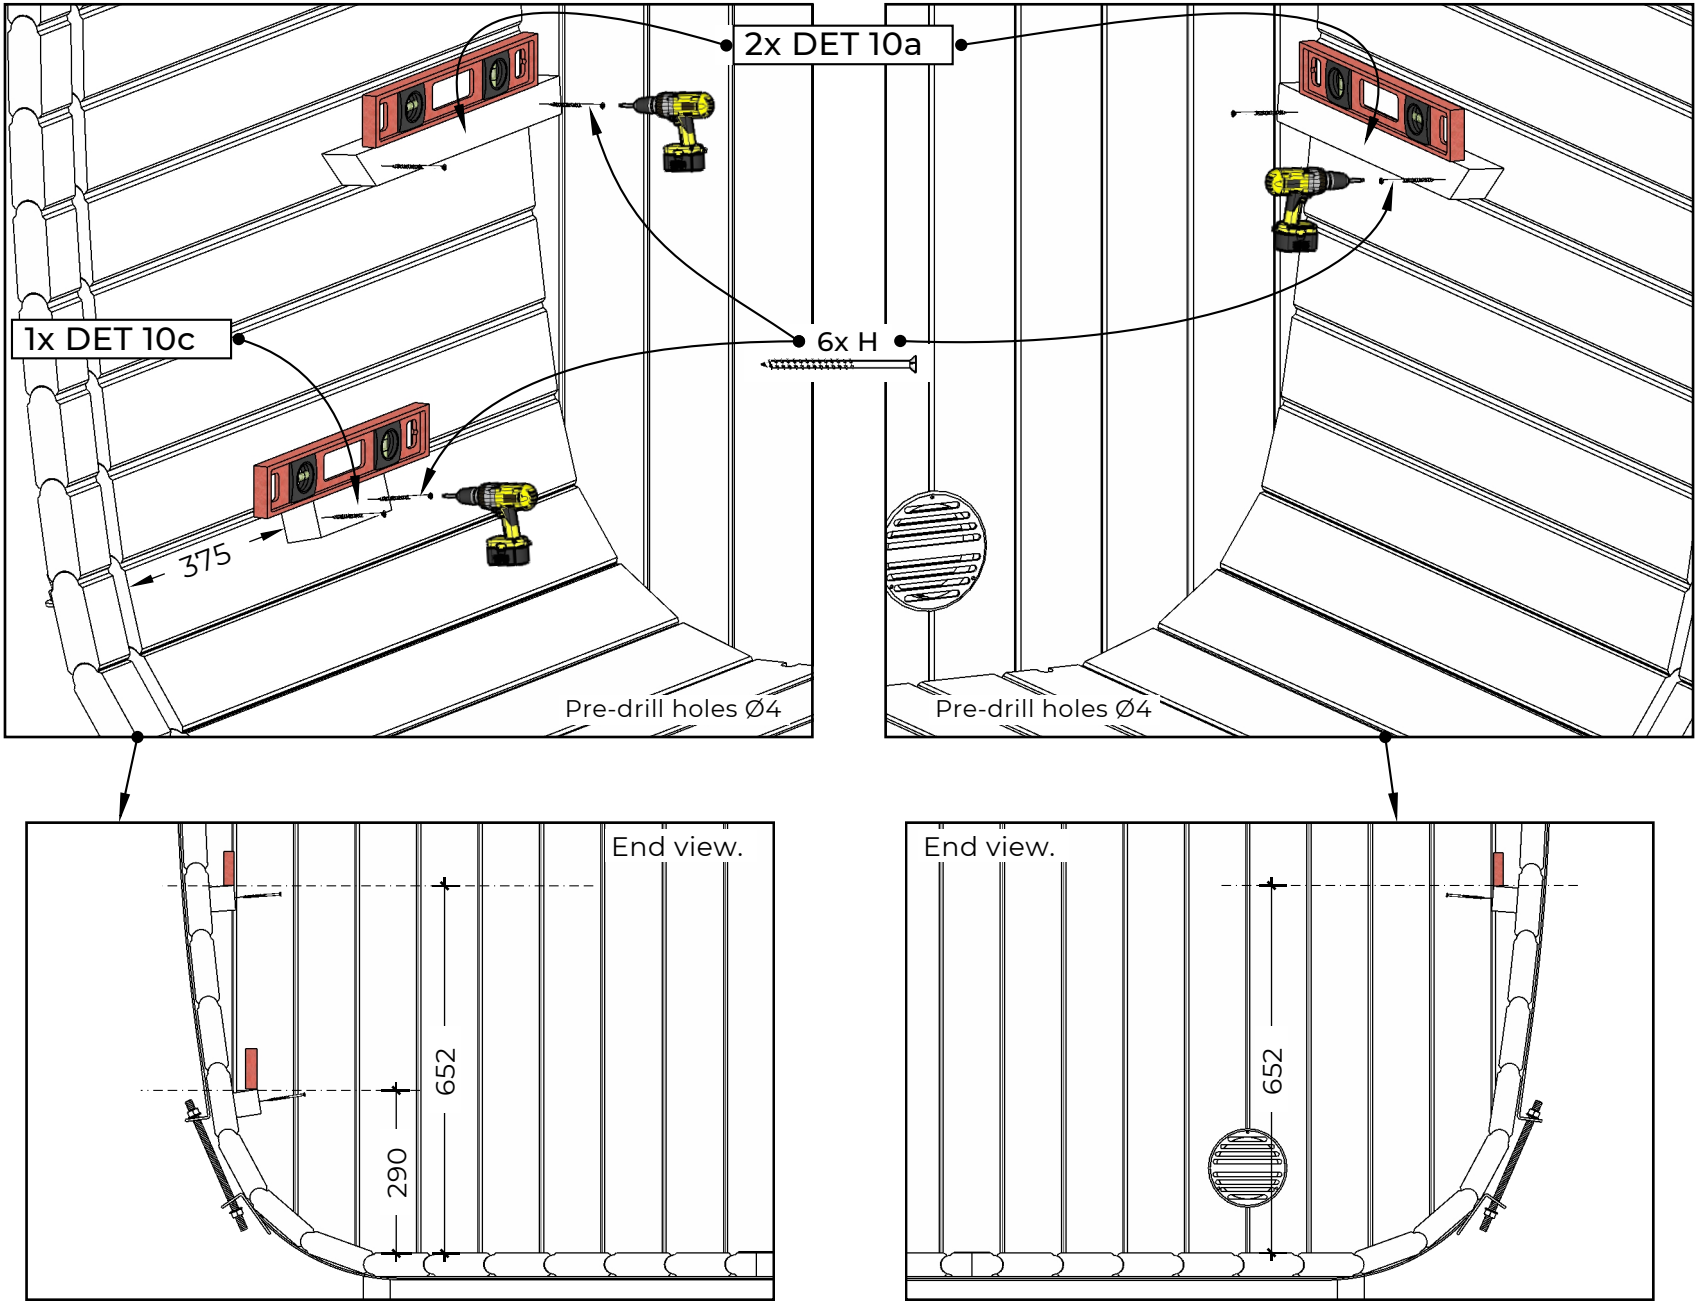

Sauna CUBE 125,Ø200

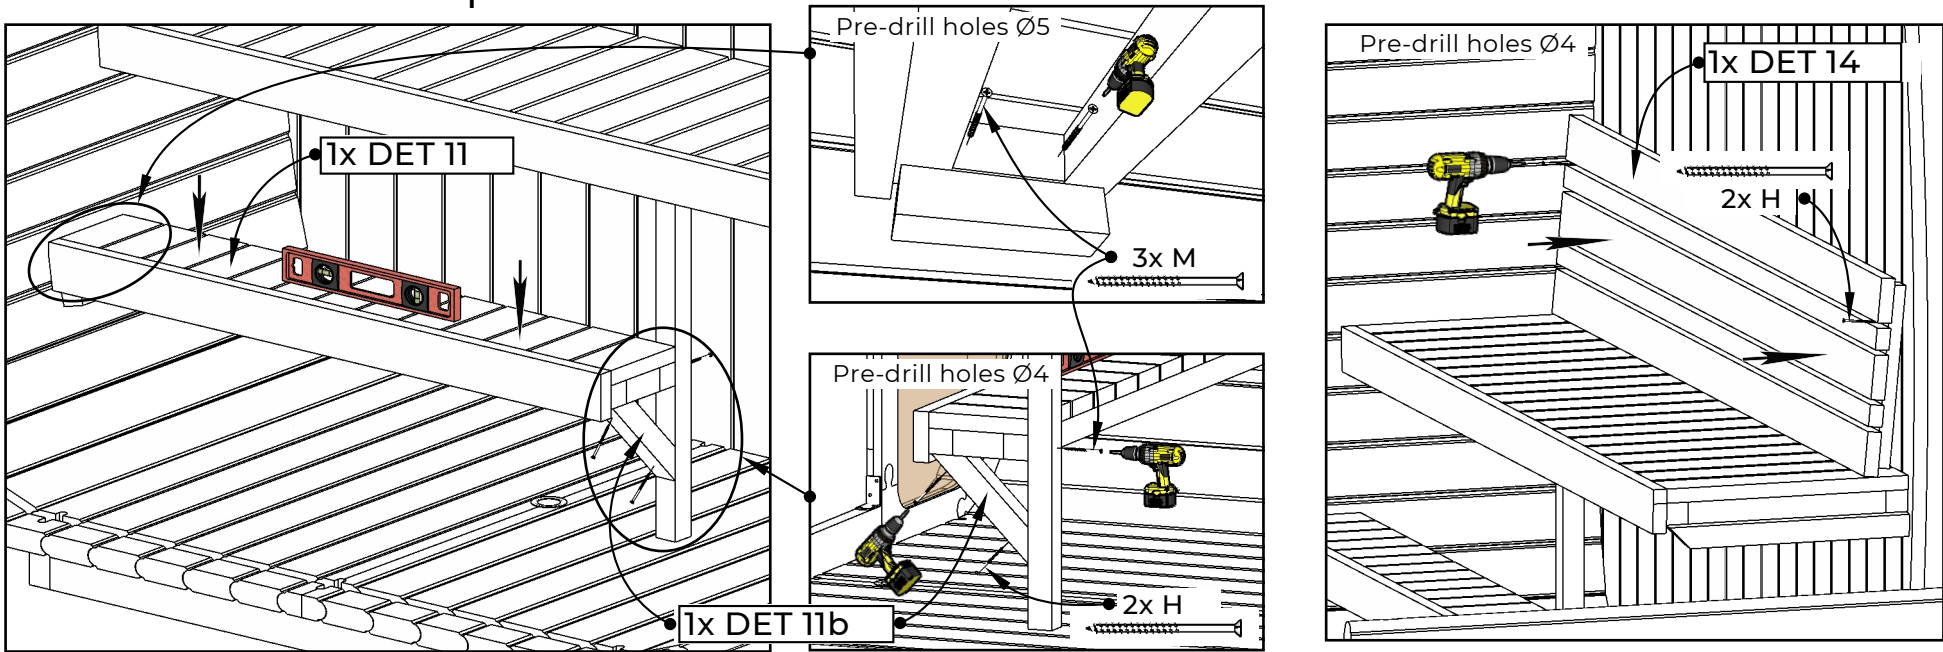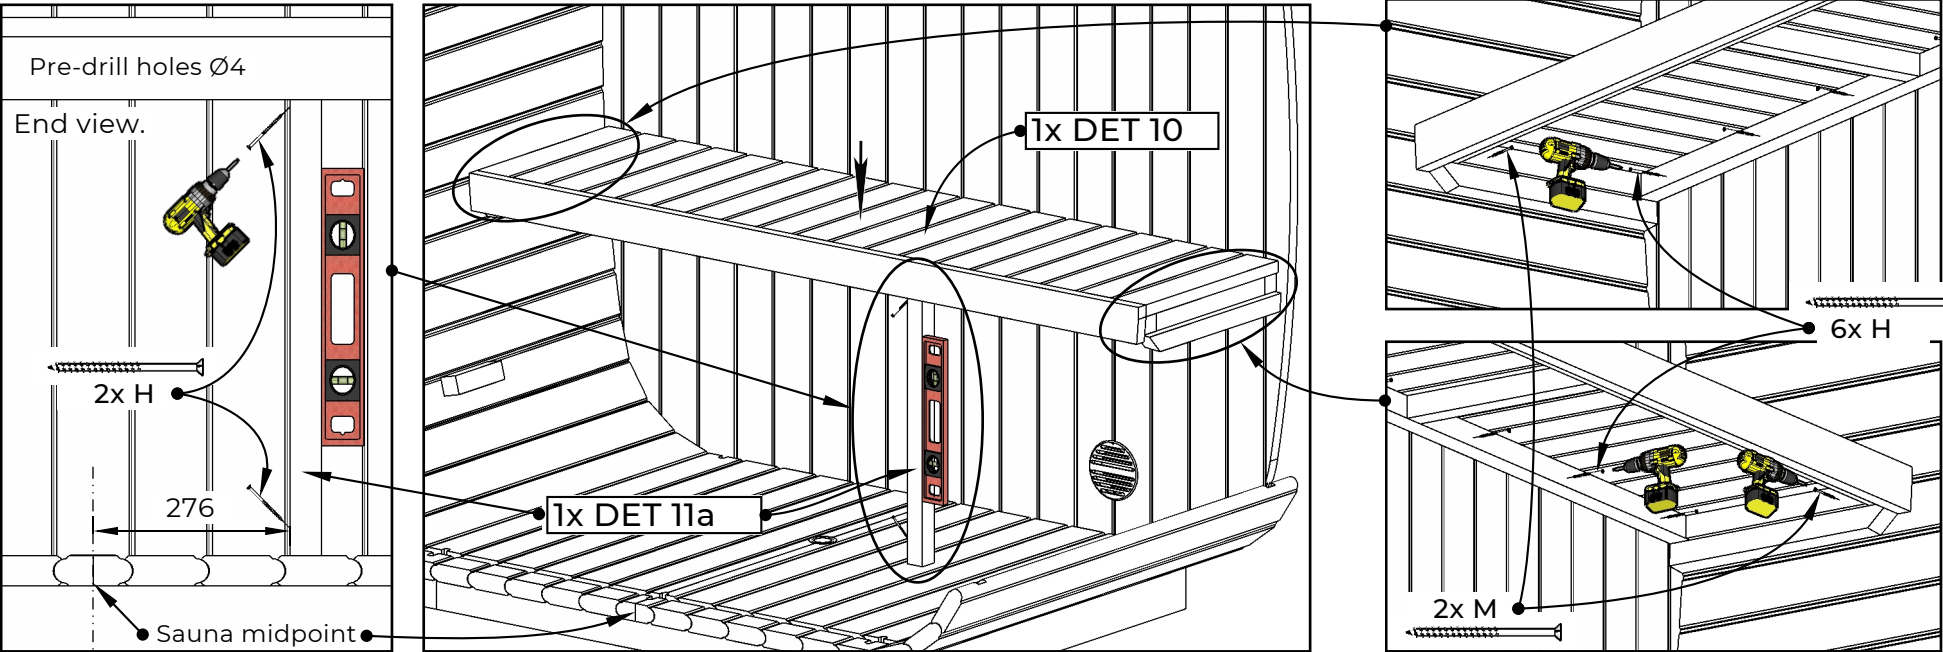


Sauna CUBE 125,Ø200








Sauna CUBE 125,Ø200

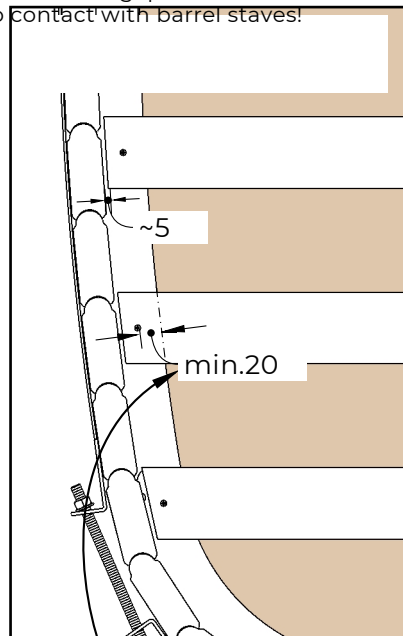
Leave ~5 mm. gap from board end coming into contact with barrel staves!



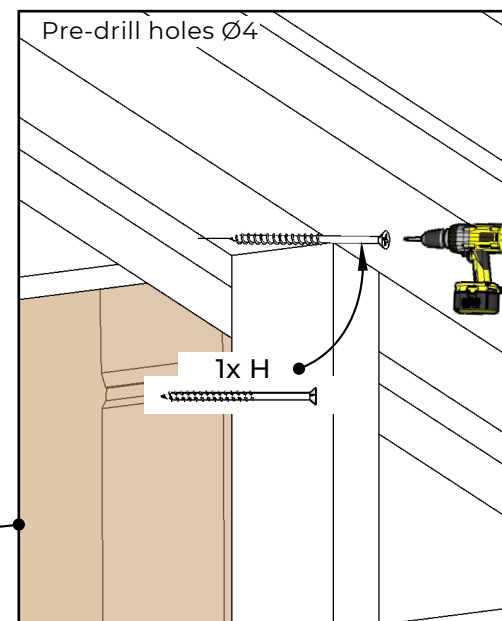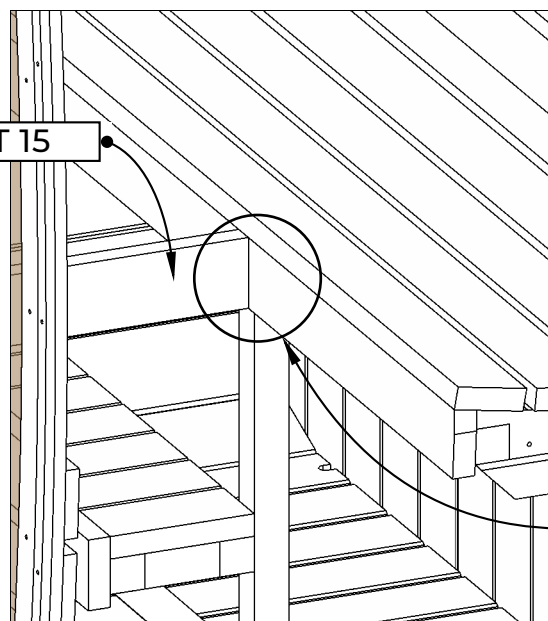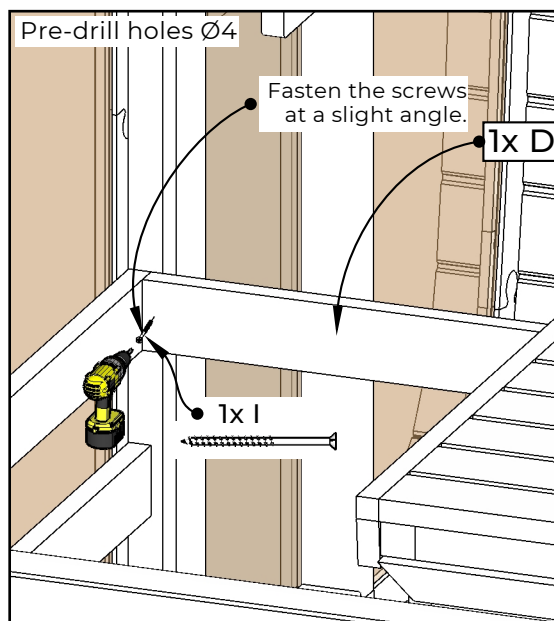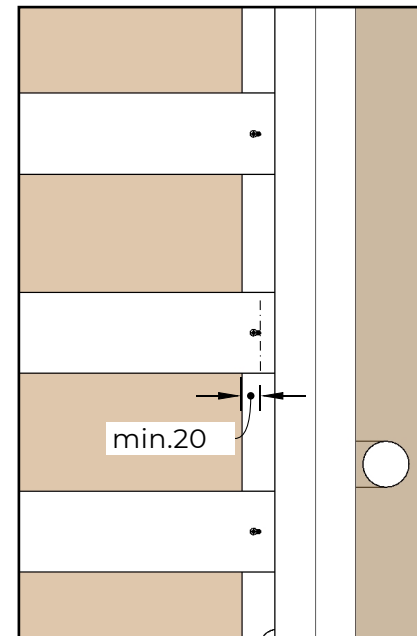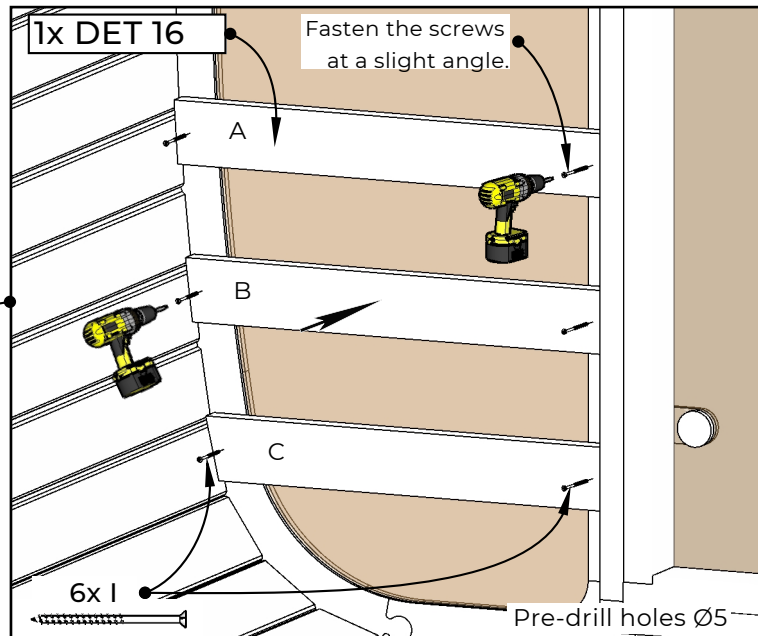Please be careful!!! Do not hit the glass with the screw.




II

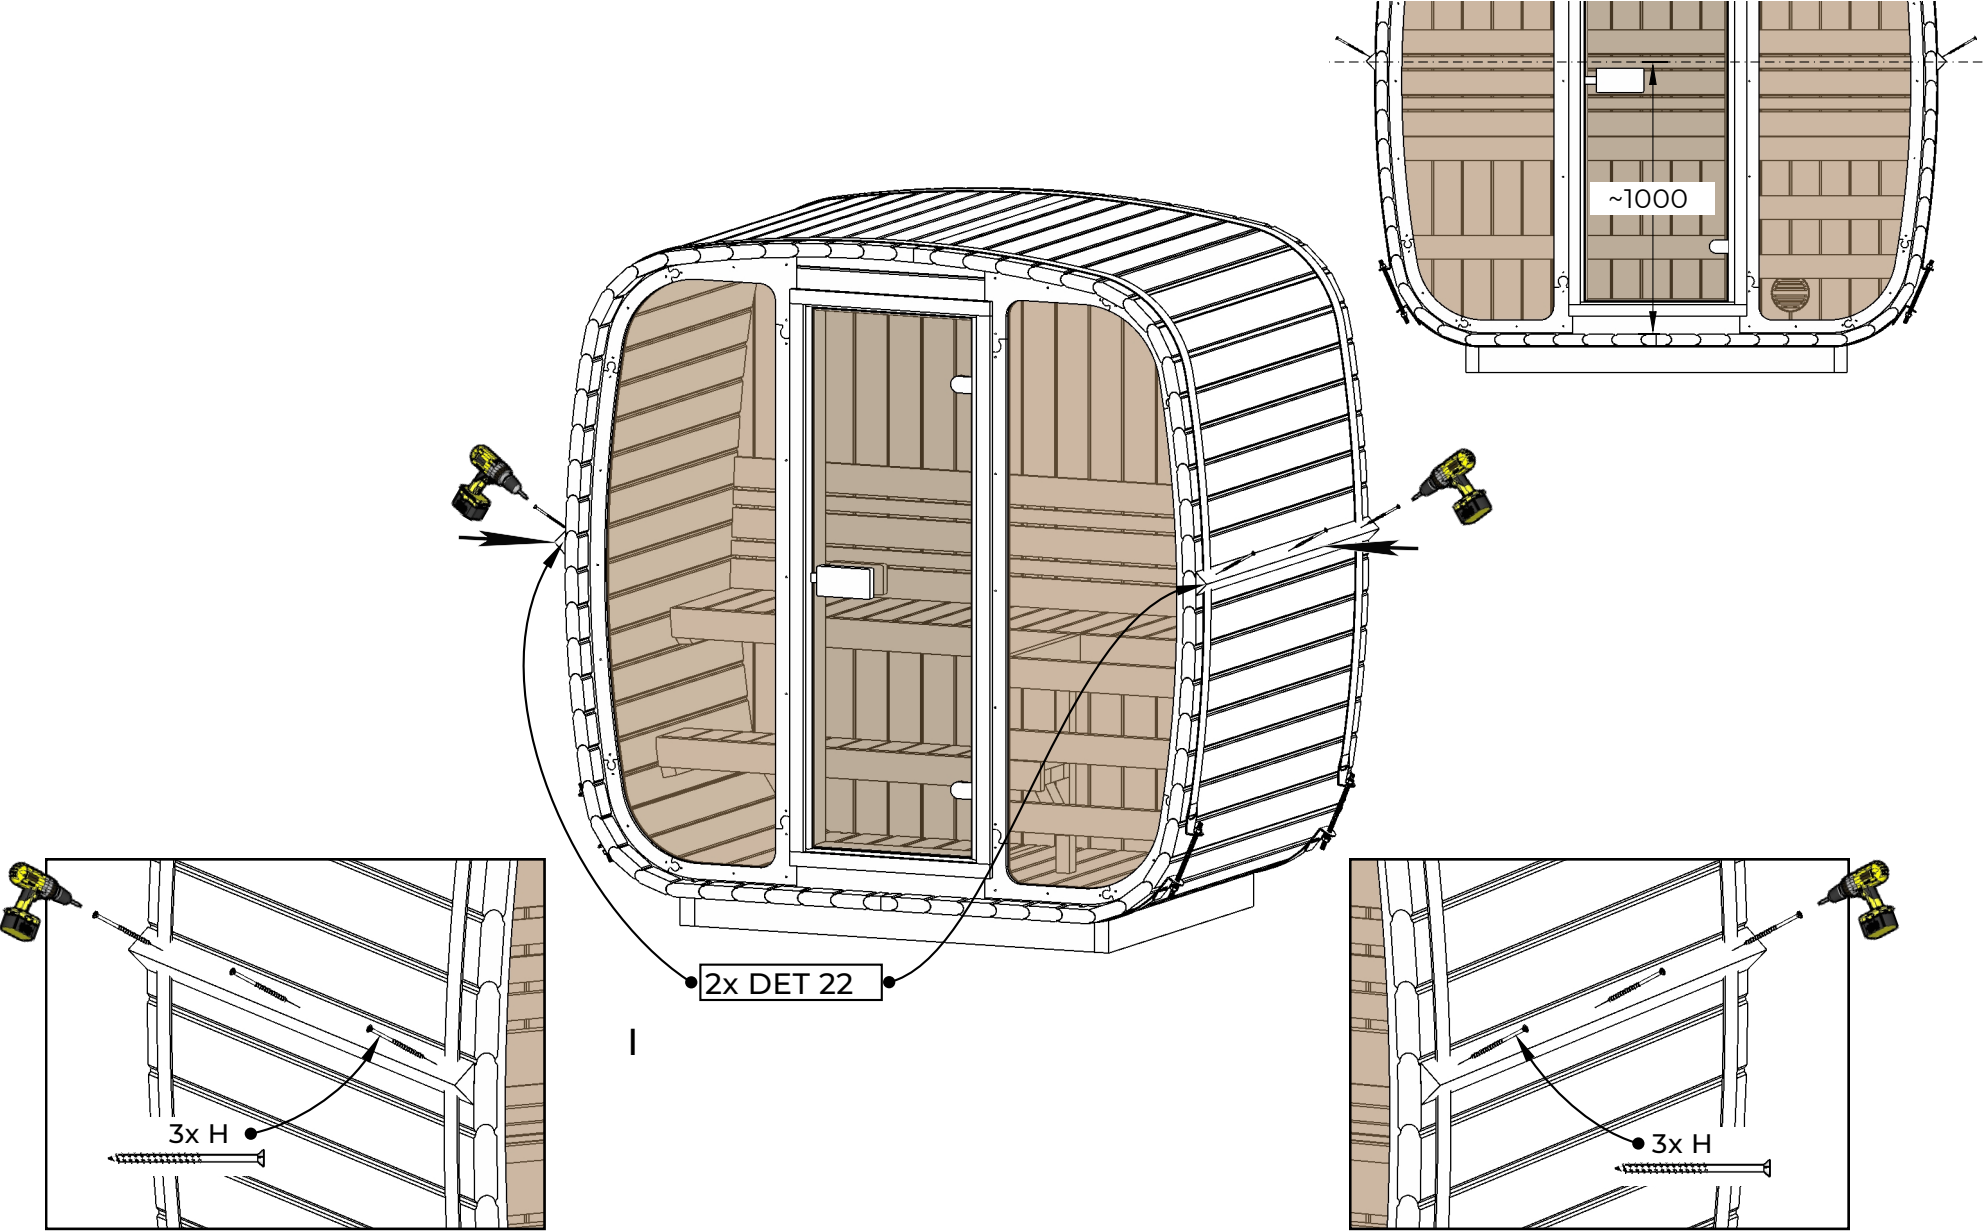

Sauna CUBE 125,Ø200


Underlay felt installation manual.

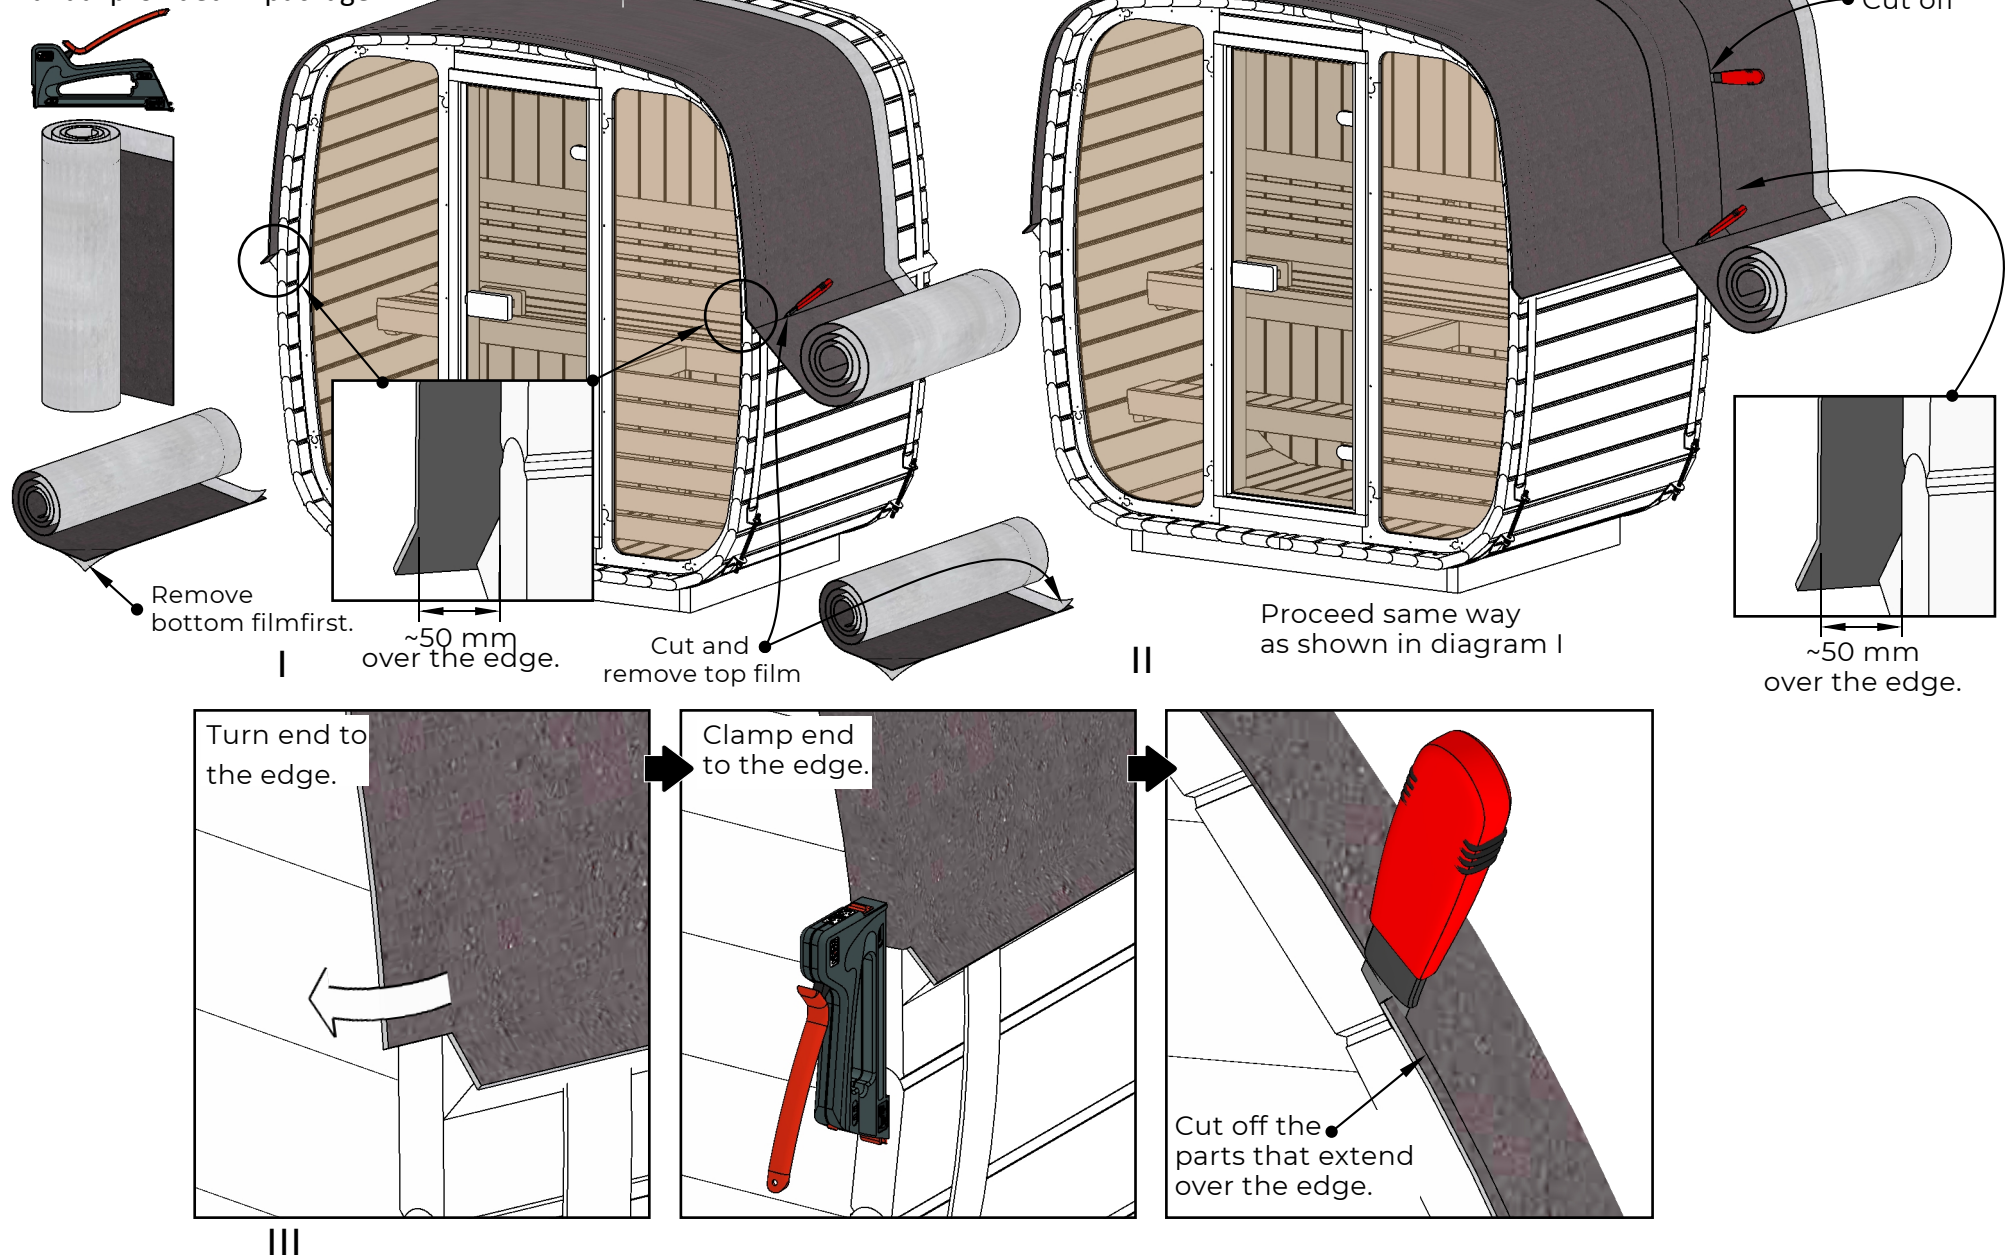Attention! Refer to underlay installation manual provided in package.




Sauna CUBE 125,Ø200

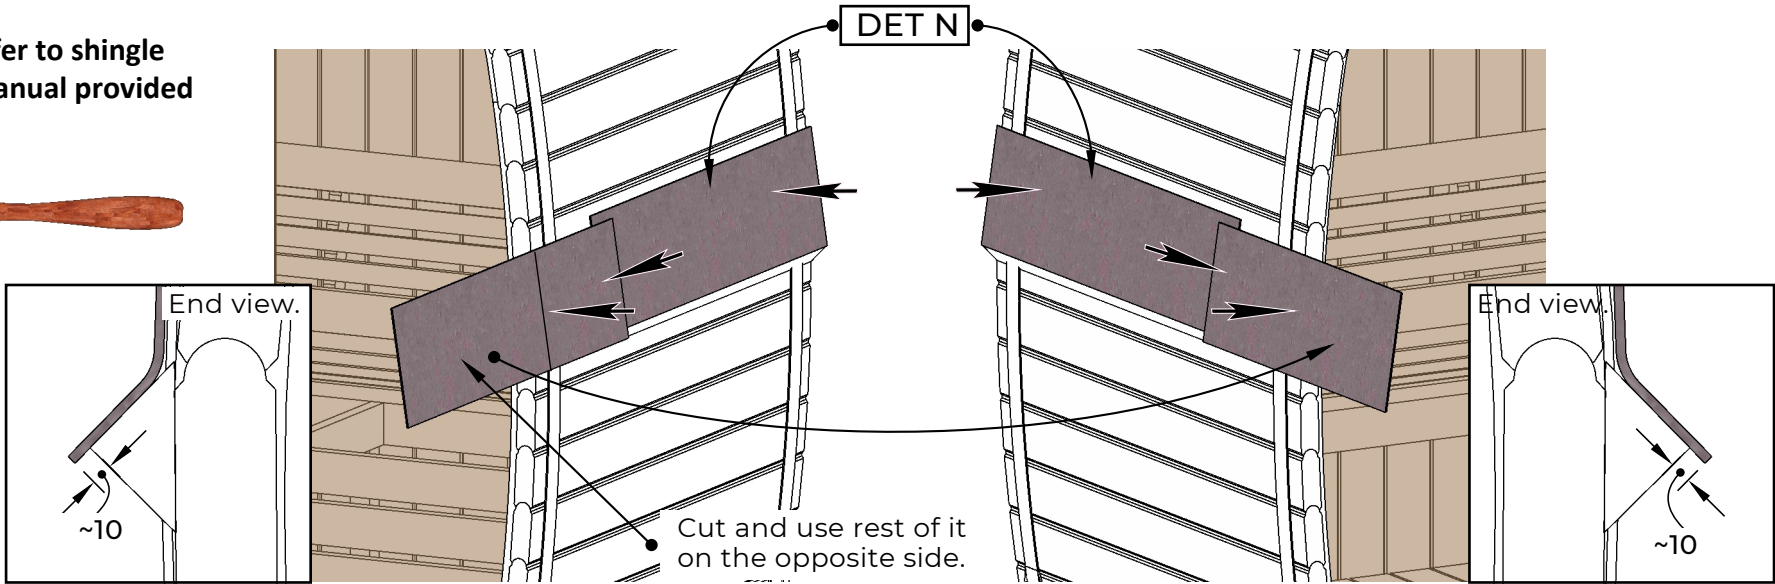
Attention! Refer to shingle installation manual provided in package.



I

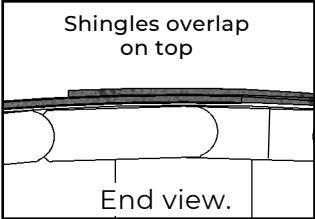


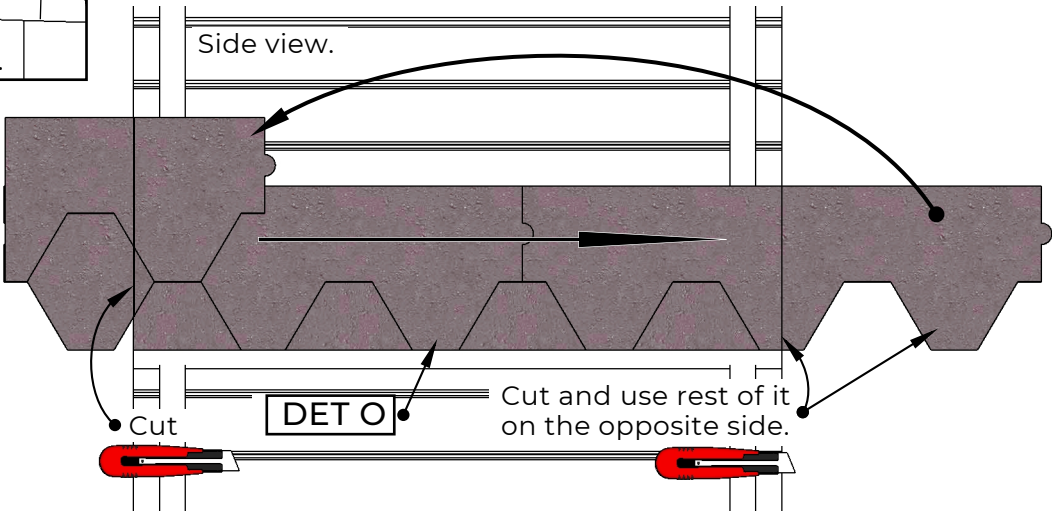Attention! Refer to shingle installation manual provided in package.



II

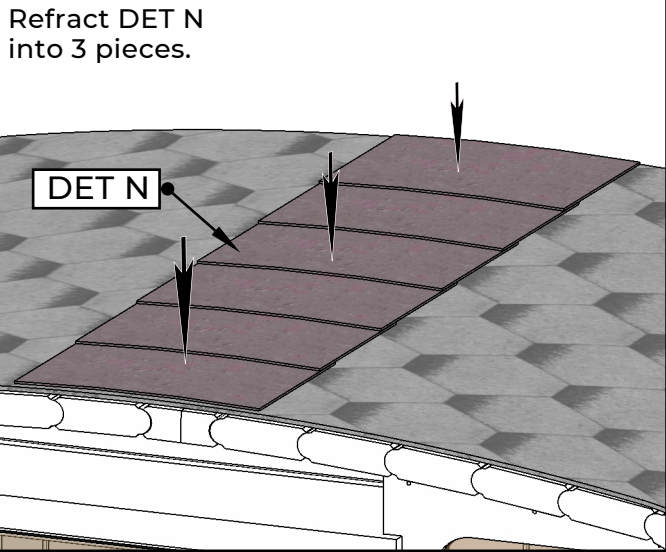Attention! Refer to shingle installation manual provided in package.



III

